




1. From the Android Home screen, swipe up for quick access to all installed Apps and Settings.

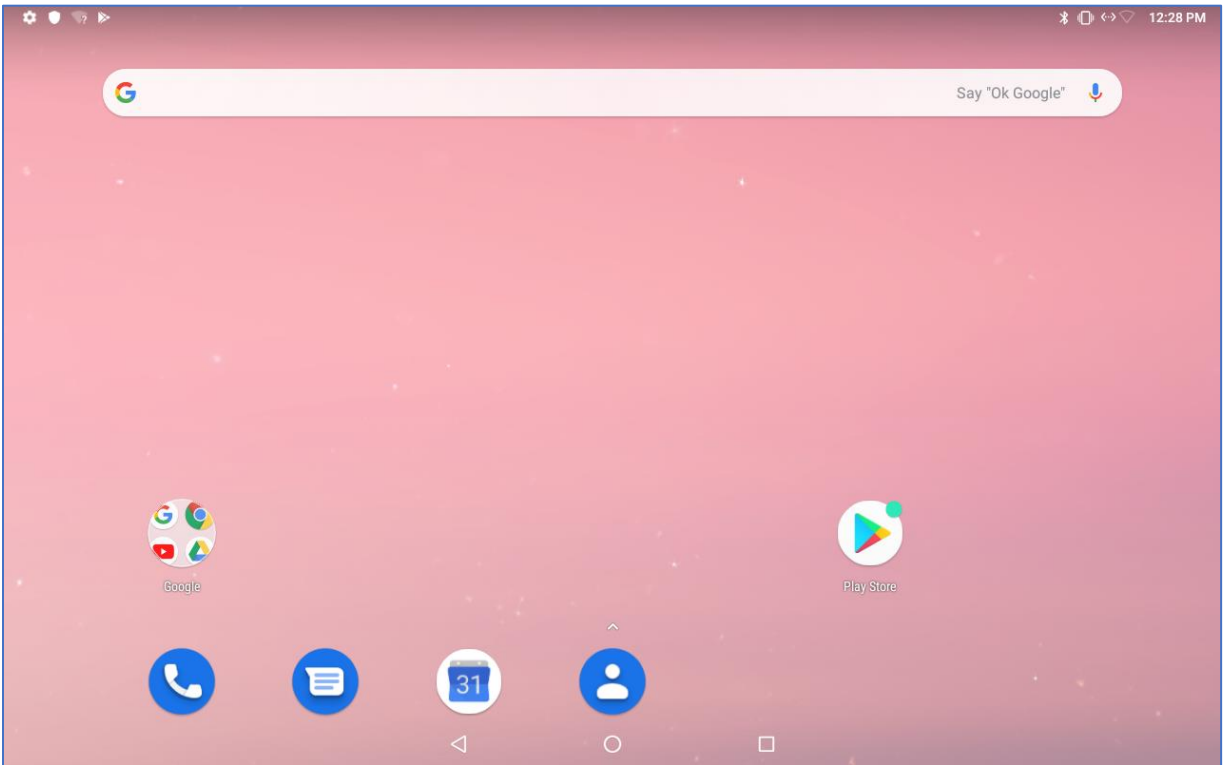


2. Click the **Settings** button

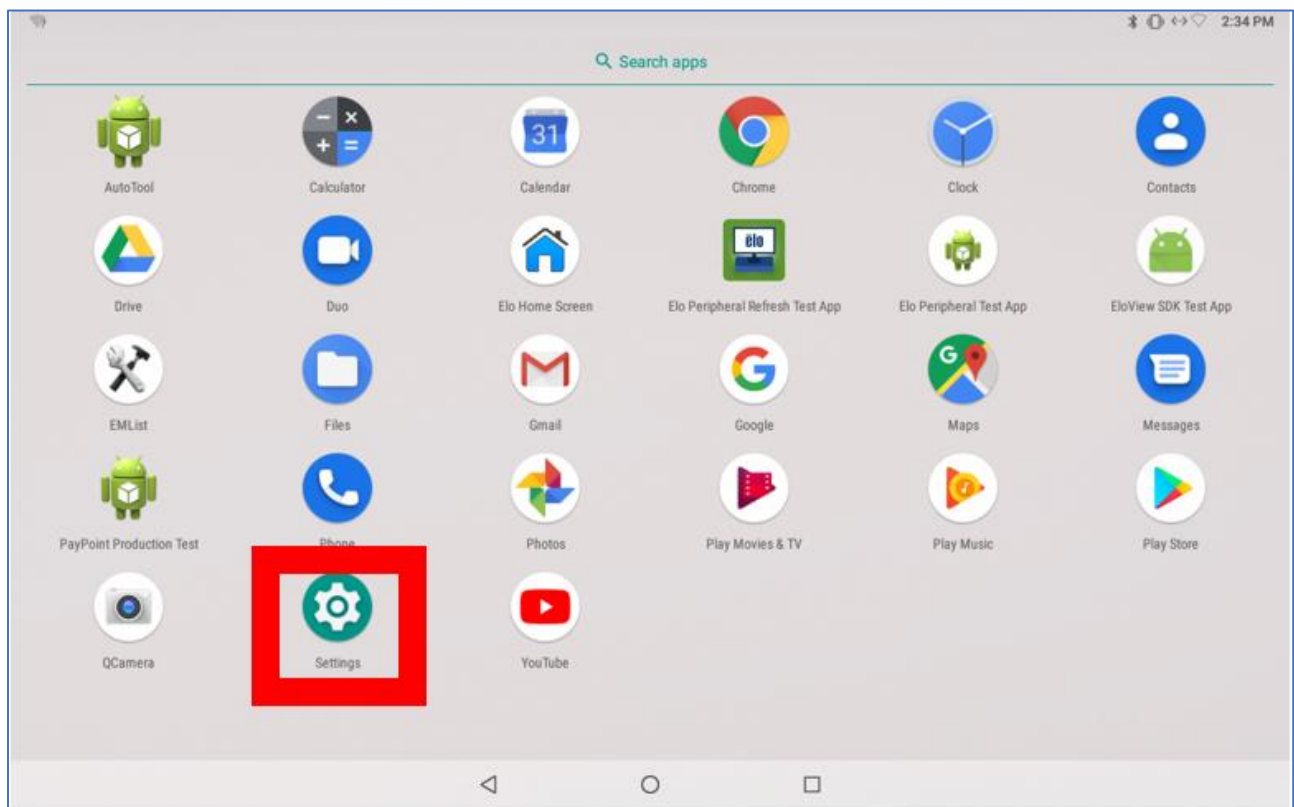


3. Scroll to the bottom of the screen and select **System**

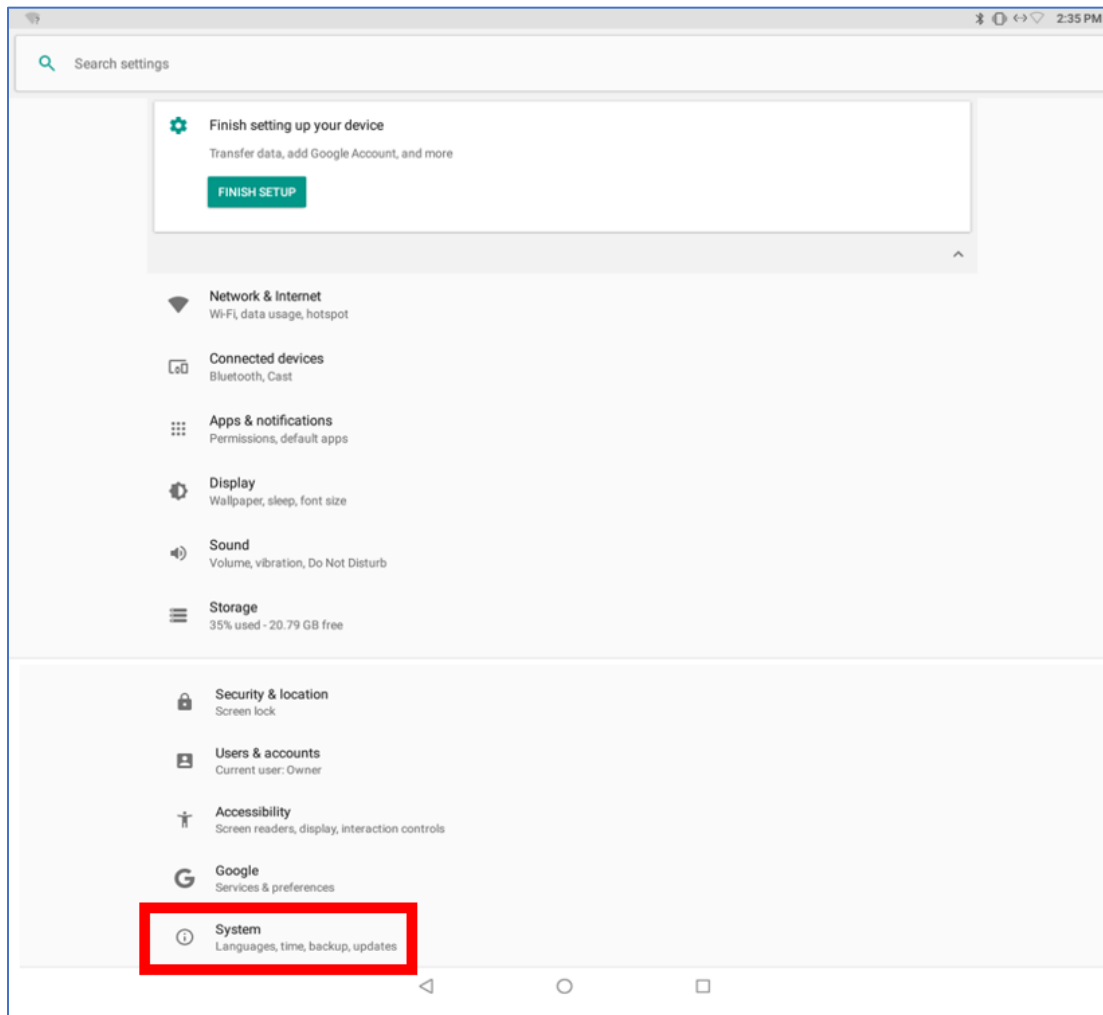


4. Click **Reset Options**

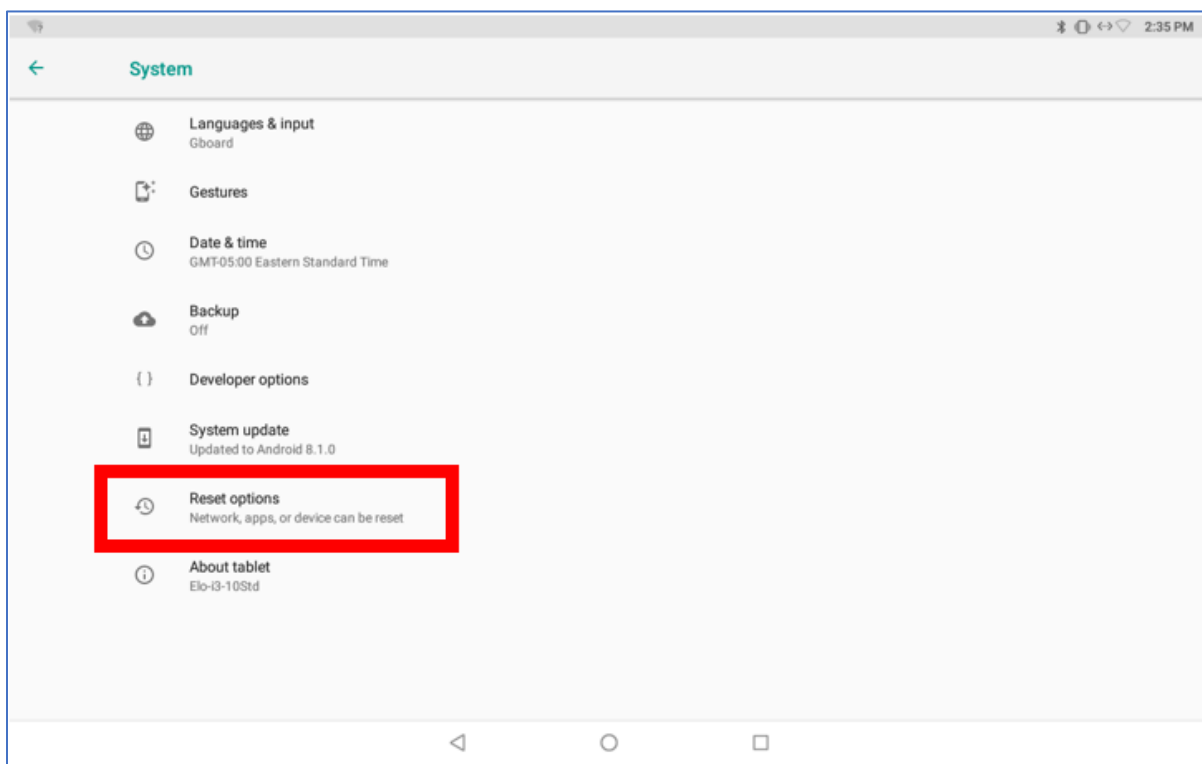

5. Click the ***“Erase all data (factory reset to EloView Mode)”*** option
- Note: choosing “Erase all data (factory reset)” will perform a full data wipe but retain Android Home mode.

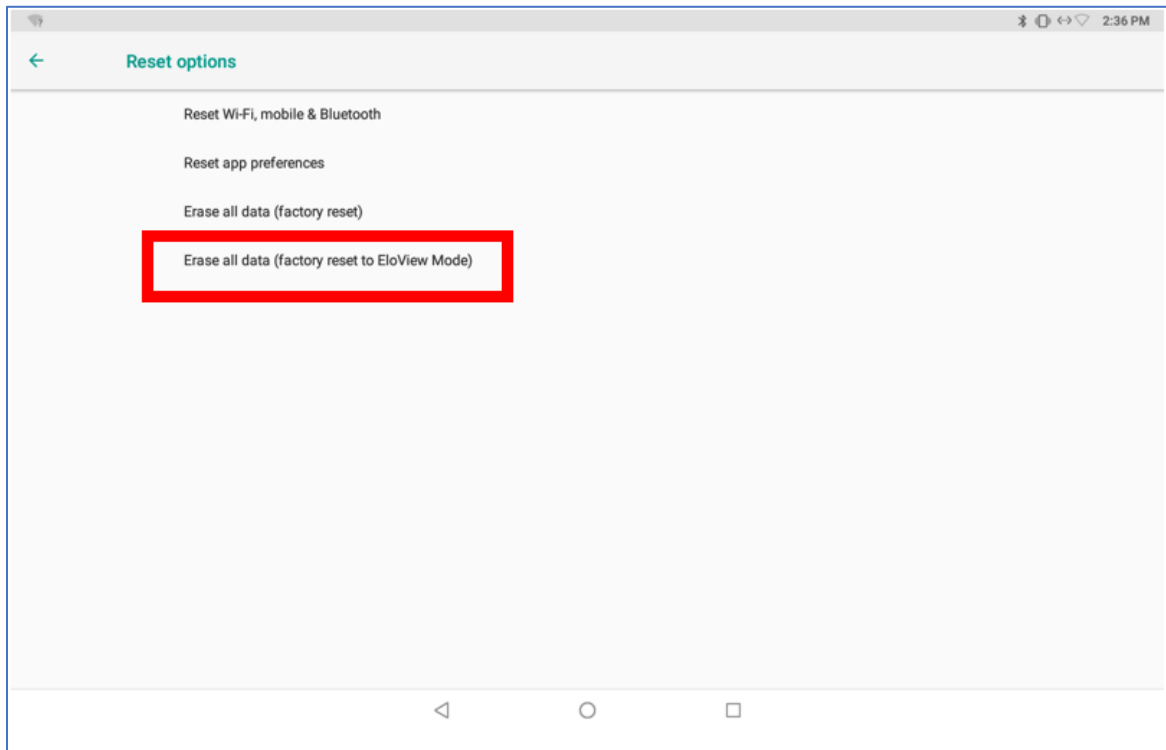

6. Click the **Reset Tablet** button

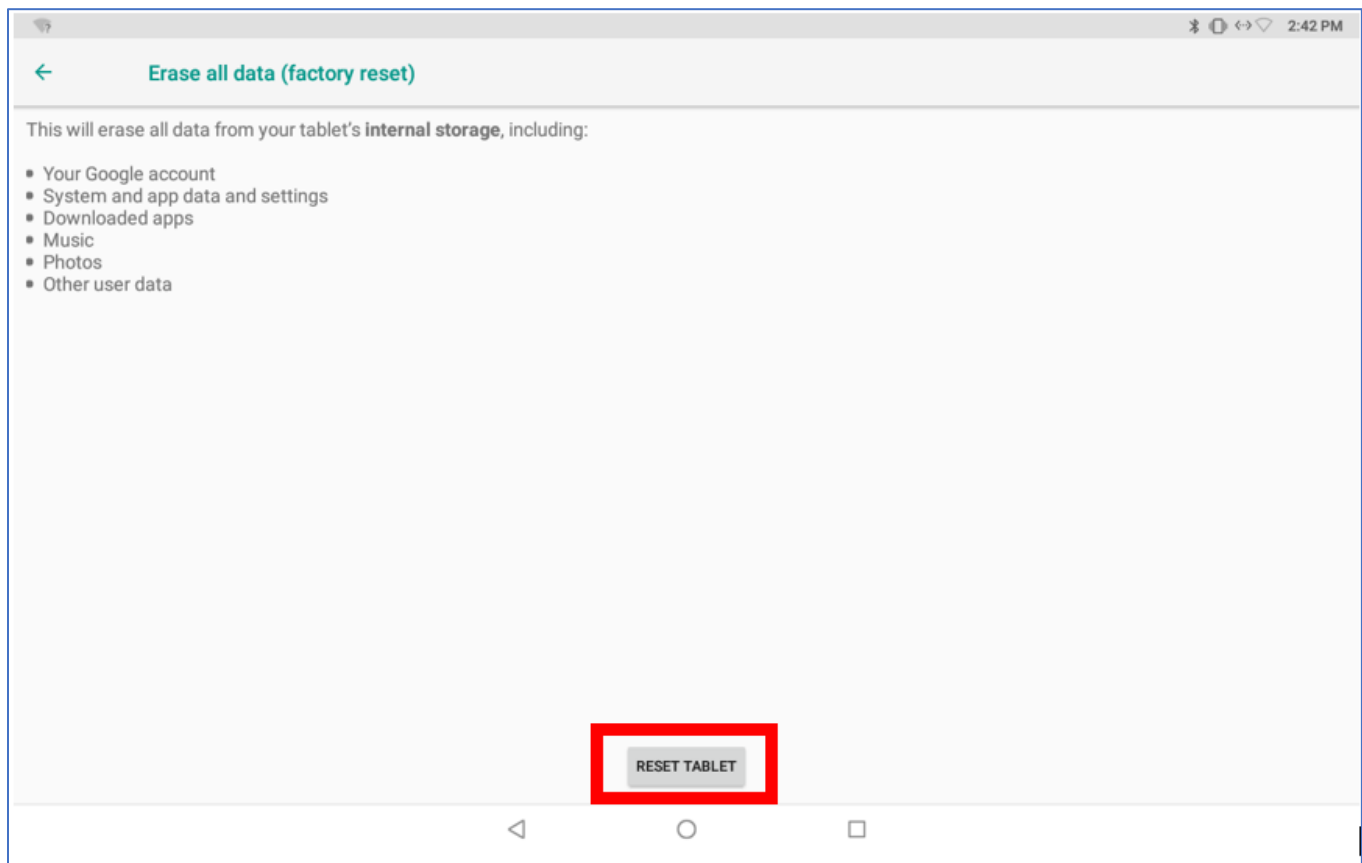

7. Click the **Erase Everything** button

