

EloPOS BIOS Update Procedure	TB000084	REV. A
------------------------------	----------	--------

Executive Summary

This Technical Bulletin describes how to update the BIOS firmware in the EloPOS touch computers.

Software/Hardware Need

- EloPOS touch computer
- BIOS Firmware Files (sent by Elo Tech Support, or may be on Elo website)

Steps

- 1. Power on the EloPOS touch computer and press DEL key to enter BIOS .
 - a. Select Boot > Update System BIOS and change the setting to Enabled

Aptio Setup Main Advanced Chipset	Utility - Copyright (C) 2018 America Security Boot Save & Exit
Boot Configuration	
LAN PXE OPROM	[Disphied]
Fast Boot	[Disabled]
Bootup NumLock State	[00]
Update System BIOS	[Enabled]
Quiet Boot	[Enabled]
Set Boot Priorities Boot Option #1 Boot Option #2 Boot Option #2	Update System BIOS
Boot Option #4	Disabled
Boot Option #5	A DESCRIPTION OF THE OWNER OWNER OF THE OWNER
Boot Option #6	[UEFI USB Flash]
Boot Option #7	[UEFI Network]
▶ UEFI Hard Disk Drive BBS	Priorities

- b. Select Save & Exit > Save Changes and Reset to reboot into Windows
- 2. Download new BIOS update files and unzip to a location on the computer.
- In Windows system, open the BIOS folder and select *update.bat* to execute BIOS update (Note: E2, E3 and E5 BIOS have different files so DO NOT update a wrong BIOS file.)

修改日期	類型	大小
2018/7/19下午0	應用程式	566 KB
2017/3/30 上午 1	SYS 檔案	19 KB
2018/12/24 上午	19A 榴案	16,384 KB
2018/12/24 上午	文字文件	5 KB
2018/12/24 上午	Windows 批次檔案	1 KB
	修改日期 2018/7/19 下午 0 2017/3/30 上午 1 2018/12/24 上午 2018/12/24 上午 2018/12/24 上午	修改日期 類型 2018/7/19 下午 0 應用程式 2017/3/30 上午 1 SYS 檔案 2018/12/24 上午 19A 檔案 2018/12/24 上午 文字文件 2018/12/24 上午 文字文件

- 4. After update finishes, system will auto reboot.
- 5. Press DEL key to enter BIOS system
- 6. Select *Save & Exit > Restore Defaults*
- 7. Select Save & Exit > Save Changes and Reset to reboot system