
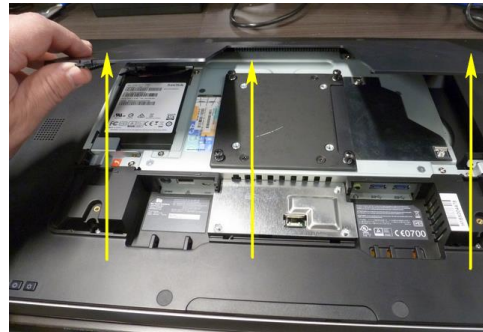


Executive Summary

This Technical Bulletin describes how to access and remove/replace the HDD/SSD in the Elo Windows I-Series 1.0 devices.

Steps

1. Place I-Series face down on a protective surface.
 - a. Using fingers, pull upwards on the two tabs on the left and right side of the rear plastic cover, slide cover up towards top of unit and lift off.

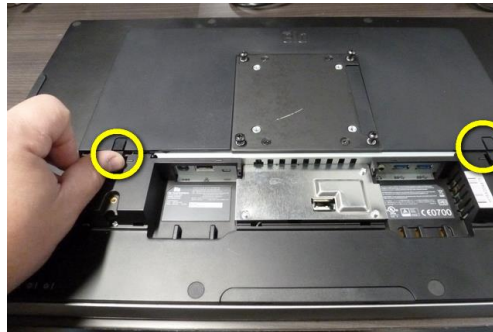

- b. Using fingers, pull metal tab labeled **1** upwards to release from the black plastic tab.
 - c. Pull the Mylar handle, labeled **2** downward on HDD/SSD to release it from the SATA connector.



- d. Remove HDD/SSD from slot and replace with compatible drive.

