


**Executive Summary**


This procedure describes how to set a static IP via Android Settings

**Steps**


1. While in EloView mode, access the **Control Panel** by pressing the **Home** and **Power** buttons on the back of your I-Series simultaneously.

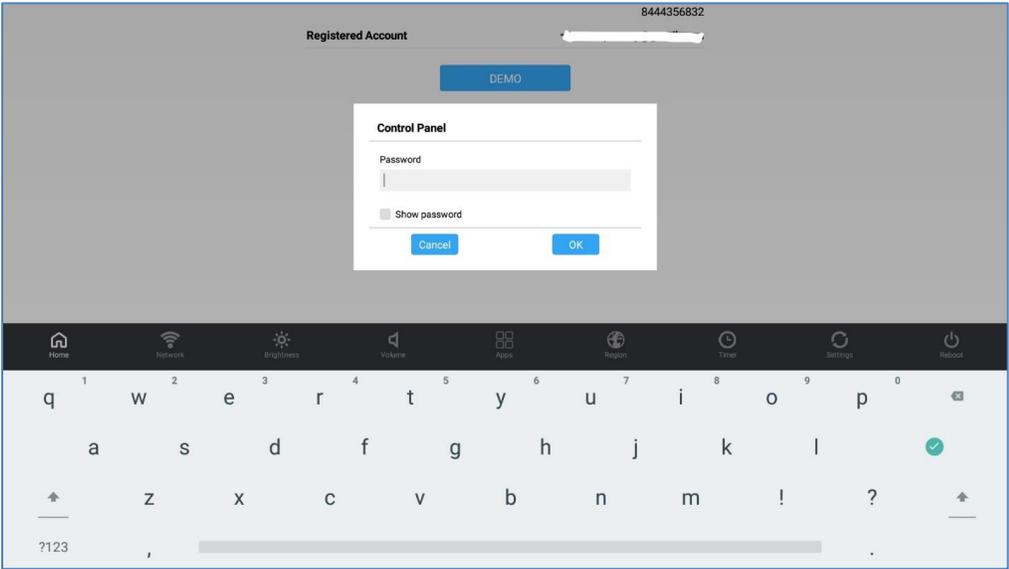


2. After entering in your password (default is “**1elo**”), navigate to the **Apps** section, located at the bottom of your screen.

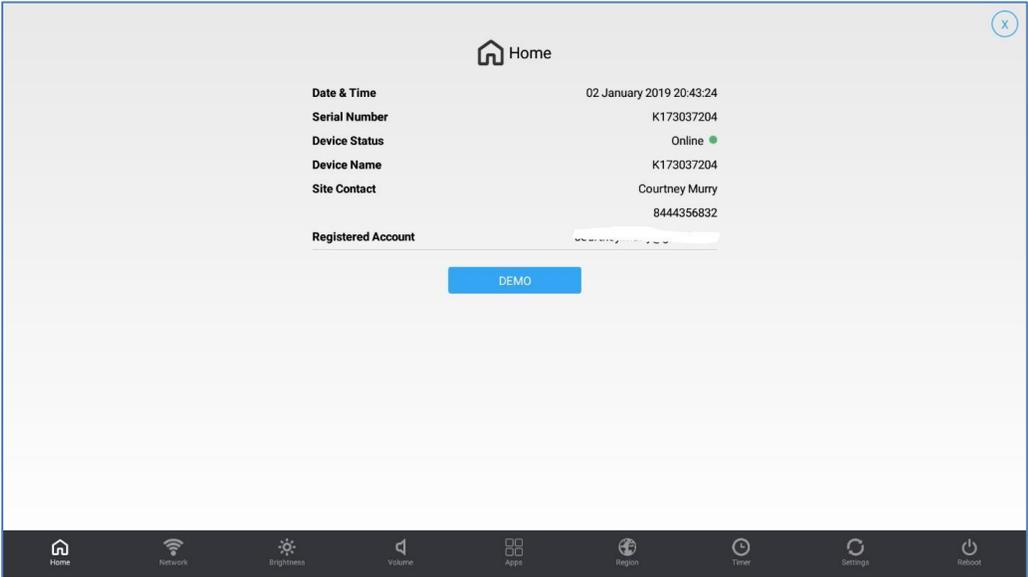


3. From the Apps screen select “**Settings**”

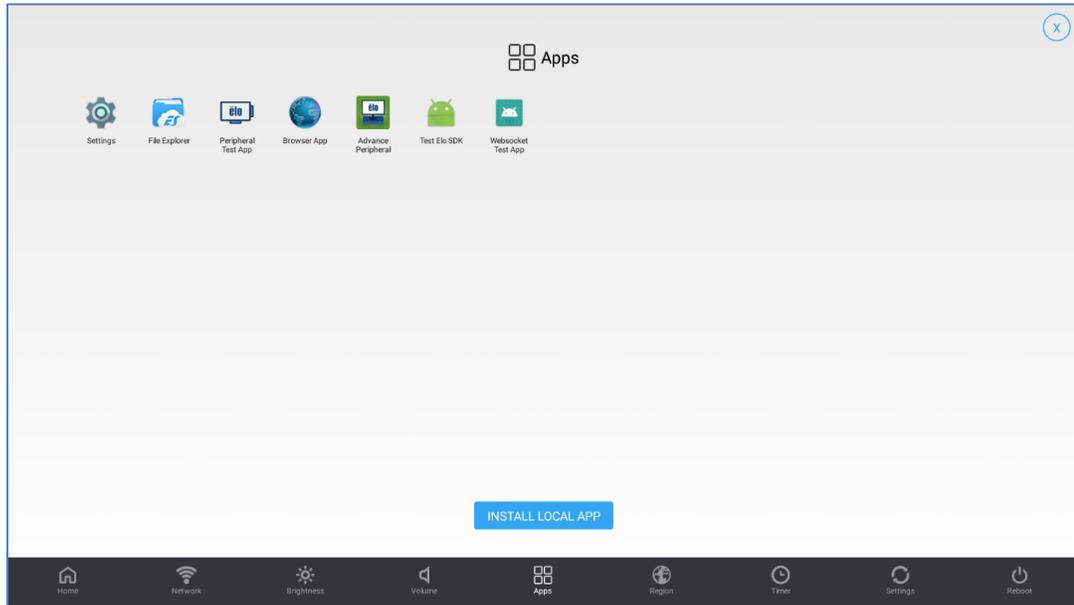


4. Select “**Ethernet**” to access the native Android settings

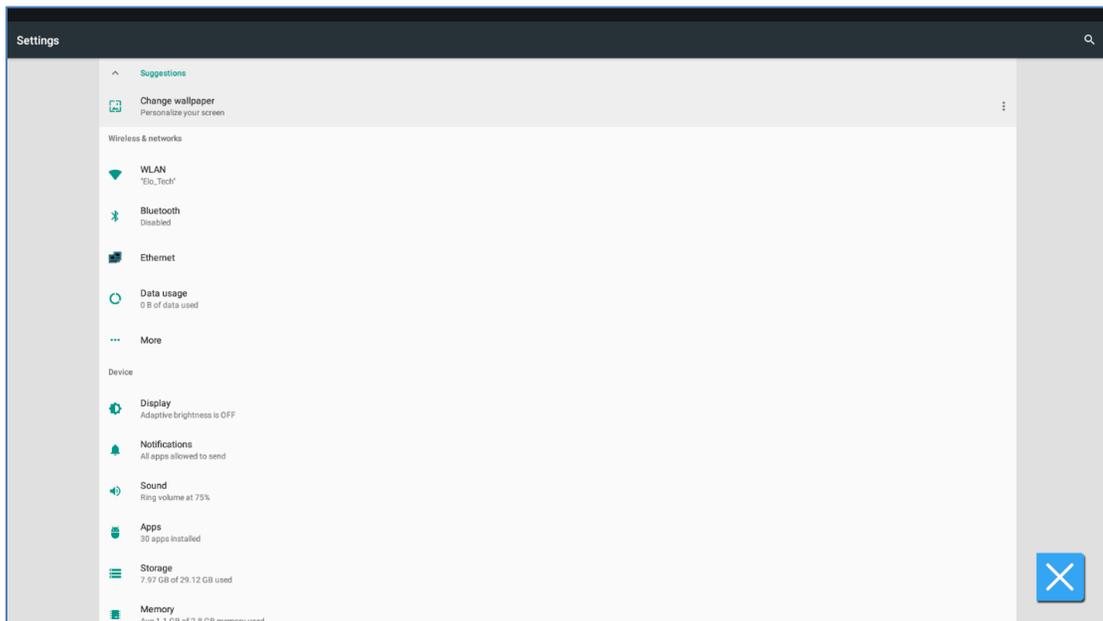


- 5. You should have 5 options available for Ethernet.
  - a. Select the option “**Ethernet configuration.**”

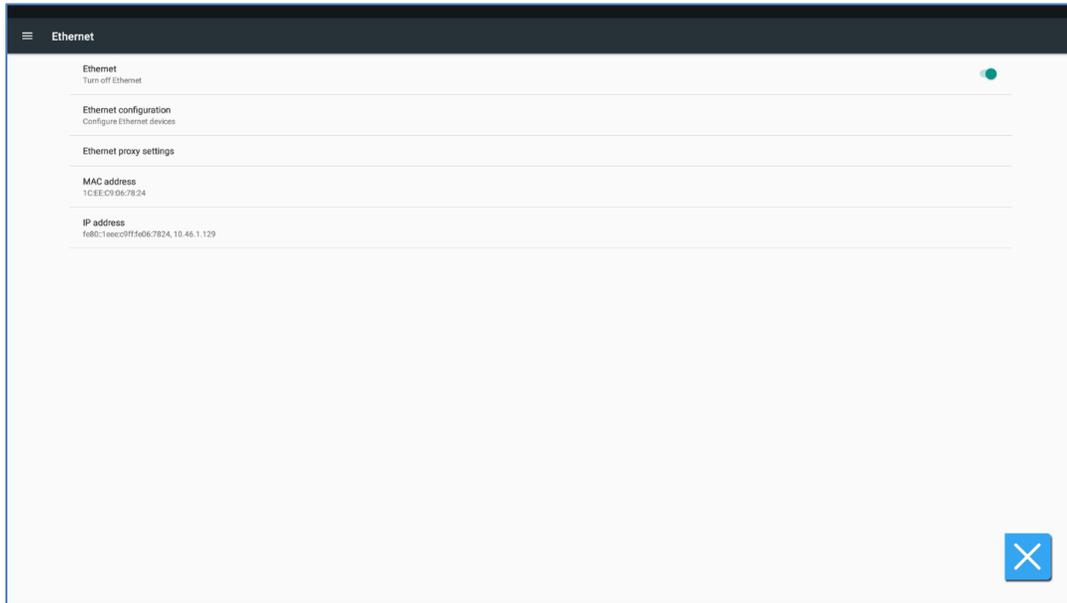

- 6. Now change the Connection Type from DHCP to **Static IP**

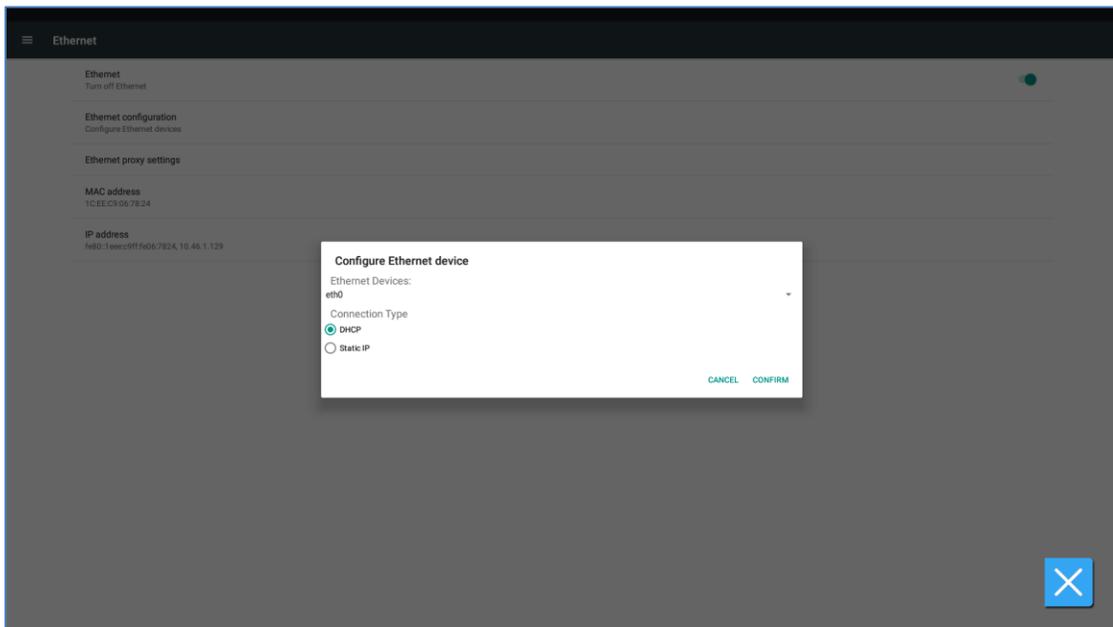

7. After the Connection Type has been changed, you will input the appropriate values in the field below and select confirm:

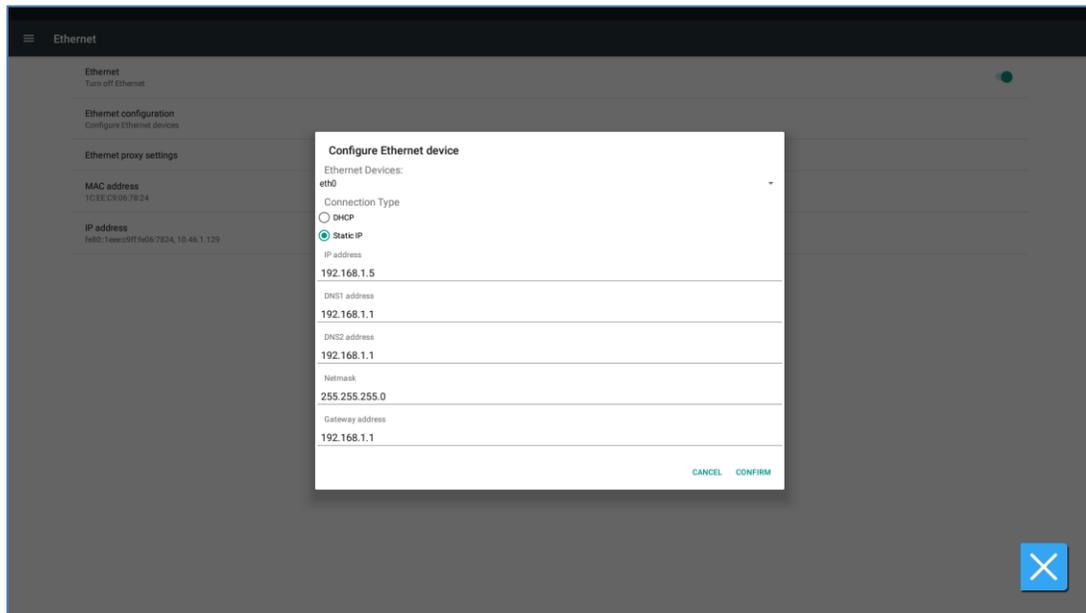

8. To exit back to the Control Panel password screen, select the Blue X located at the bottom right hand corner of your screen.