



Elo Touch Solutions

Enabling PXE Boot on Elo i-Series with Windows

TS12152016 Rev A

Elo Touch Solutions Technical Services



No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, including, but not limited to, electronic, magnetic, optical, chemical, manual, or otherwise without prior written permission of Elo Touch Solutions, Inc.

Disclaimer

The information in this document is subject to change without notice. Elo Touch Solutions, Inc. and its affiliates (collectively "Elo") makes no representations or warranties with respect to the contents herein, and specifically disclaims any implied warranties of merchantability or fitness for a particular purpose. Elo reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of Elo to notify any person of such revisions or changes.

Trademark Acknowledgments

AccuTouch, CarrollTouch, Elo, Elo (logo), Elo Touch, Elo Touch Solutions, Elo TouchSystems, IntelliTouch, iTouch, SecureTouch, TouchTools and VuPoint are trademarks of Elo and its affiliates. Windows is a trademark of Microsoft Corporation.

Table of Contents

Introduction 4

Tools Needed..... 5

Procedure 6

About This Manual

(Describe what the document is about here)

The intended audience of this document includes: IT engineers, system engineers, electrical engineers, and end-users.

If after reading through this guide, you still have questions or need help getting your system up and running, please contact an Elo Touch Solutions Technical Representative. www.elotouch.com

Tools Needed

The following hardware that is needed:

Hardware:

- Elo i-Series unit with Windows OS

The following software is needed:

Software:


- N/A

Procedure


1. With i-Series off and a physical keyboard attached – start the computer and immediately begin tapping the **CTRL** key and the **F2** key simultaneously.
This will place the unit into the ADMIN BIOS mode.
2. The ADMIN password is **eloelo**




3. Go to the “**Advanced**” tab and navigate to the “**Network Stack Configuration**” section and enable it.

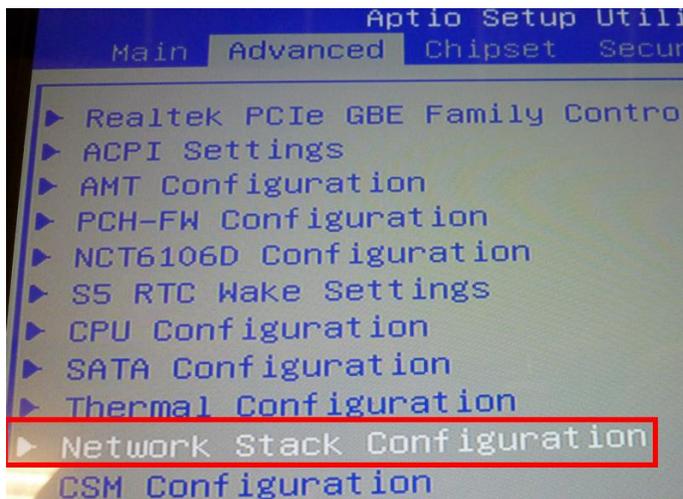

4. Go to the “**CSM Configuration**” section and set the “**Network**” option to “**UEFI**.”

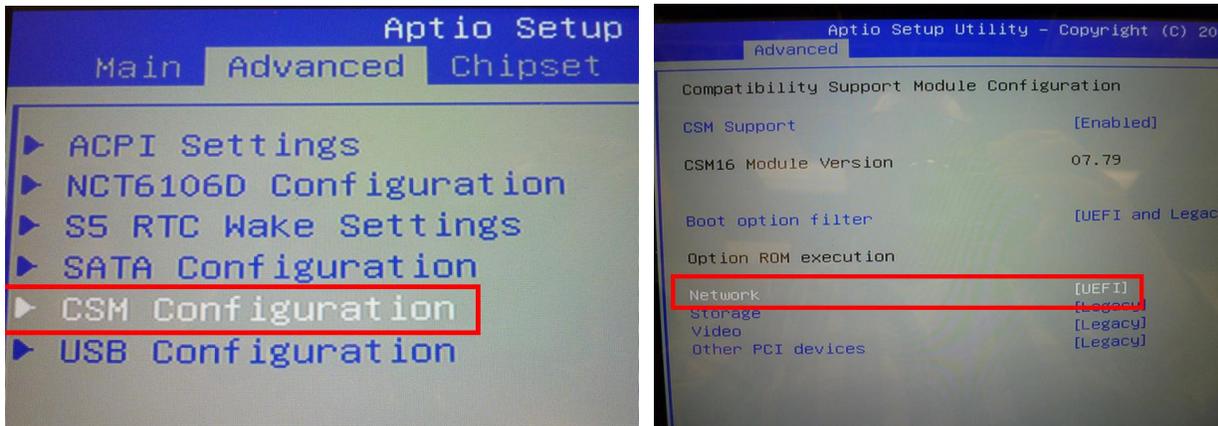

5. Go to the “**BOOT**” section and set “**Boot Option #1**” to “**Network UEFI**”

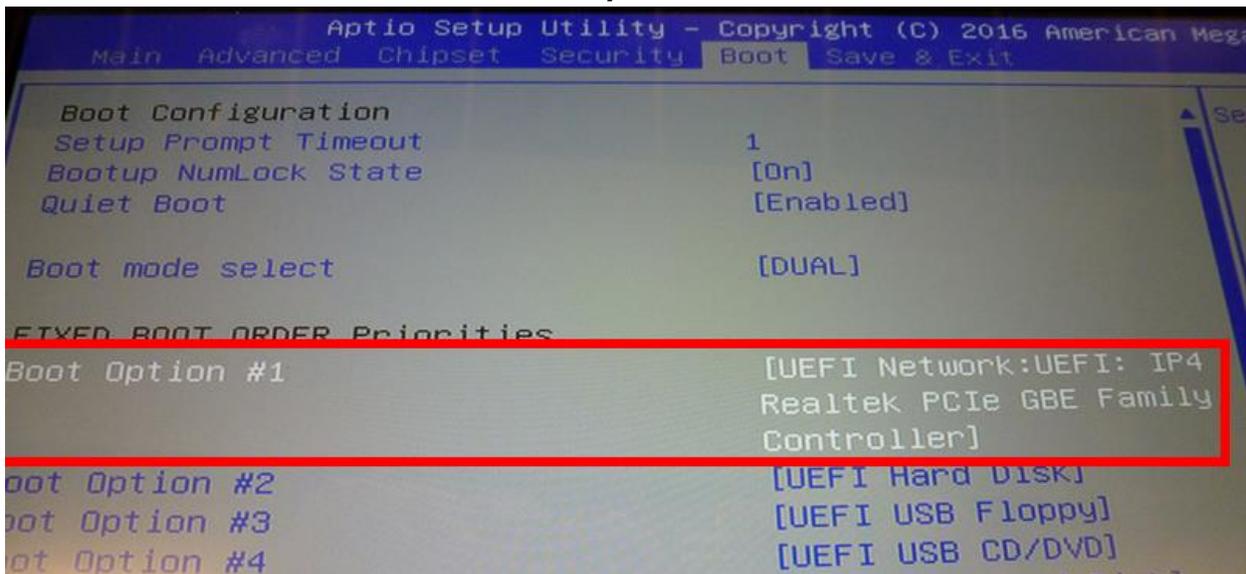

6. Go to the “**Save & Exit**” section and select “**Save changes.**”

Check out our website

www.elotouch.com

Get the latest...

- Product Information
- Specifications
- Upcoming events
- Press releases
- Software drivers

Getting in Touch with Us

To find out more about the extensive range of Elo touch solutions, visit our website at www.elotouch.com, or simply call the office nearest you:

North America

Elo Touch Solutions
1033 McCarthy Blvd
Milpitas, CA 95035

Tel 800-ELO-TOUCH

Tel + 1 408 597 8000

Fax +1 408 597 8050

customerservice@elotouch.com

Europe

Tel +32 (0) 16 70 45 00

Fax +32 (0)16 70 45 49

elosales@elotouch.com

Asia-Pacific

Tel +86 (21) 6106 7162

Fax +86 (21) 6485 3981

www.elotouch.com.cn

Latin America

Tel 786-923-0251

Fax 305-931-0124

www.elotouch.com