

Introduction

This procedure explains how enter the BIOS and change boot settings to be able to boot from an external USB device. This is for customers that want to do things such as; restore the operating system from an external DVD drive, USB flash drive, or any other USB bootable device.

Products Included


Elo B,C,D, and R series touchcomputers.



BIOS settings B,C,D,R touchcomputers


1. Entering system BIOS

- 1.1 With the bootable device connected and a USB keyboard connected to the Elo touchcomputer, shutdown and restart system.
- 1.2 As computer is booting up, begin pressing the DEL key on the keyboard to enter the BIOS.
- 1.3 Once in BIOS, use the arrow keys on the keyboard to navigate to the “Boot” section and enter the “Boot Settings Configuration” option.

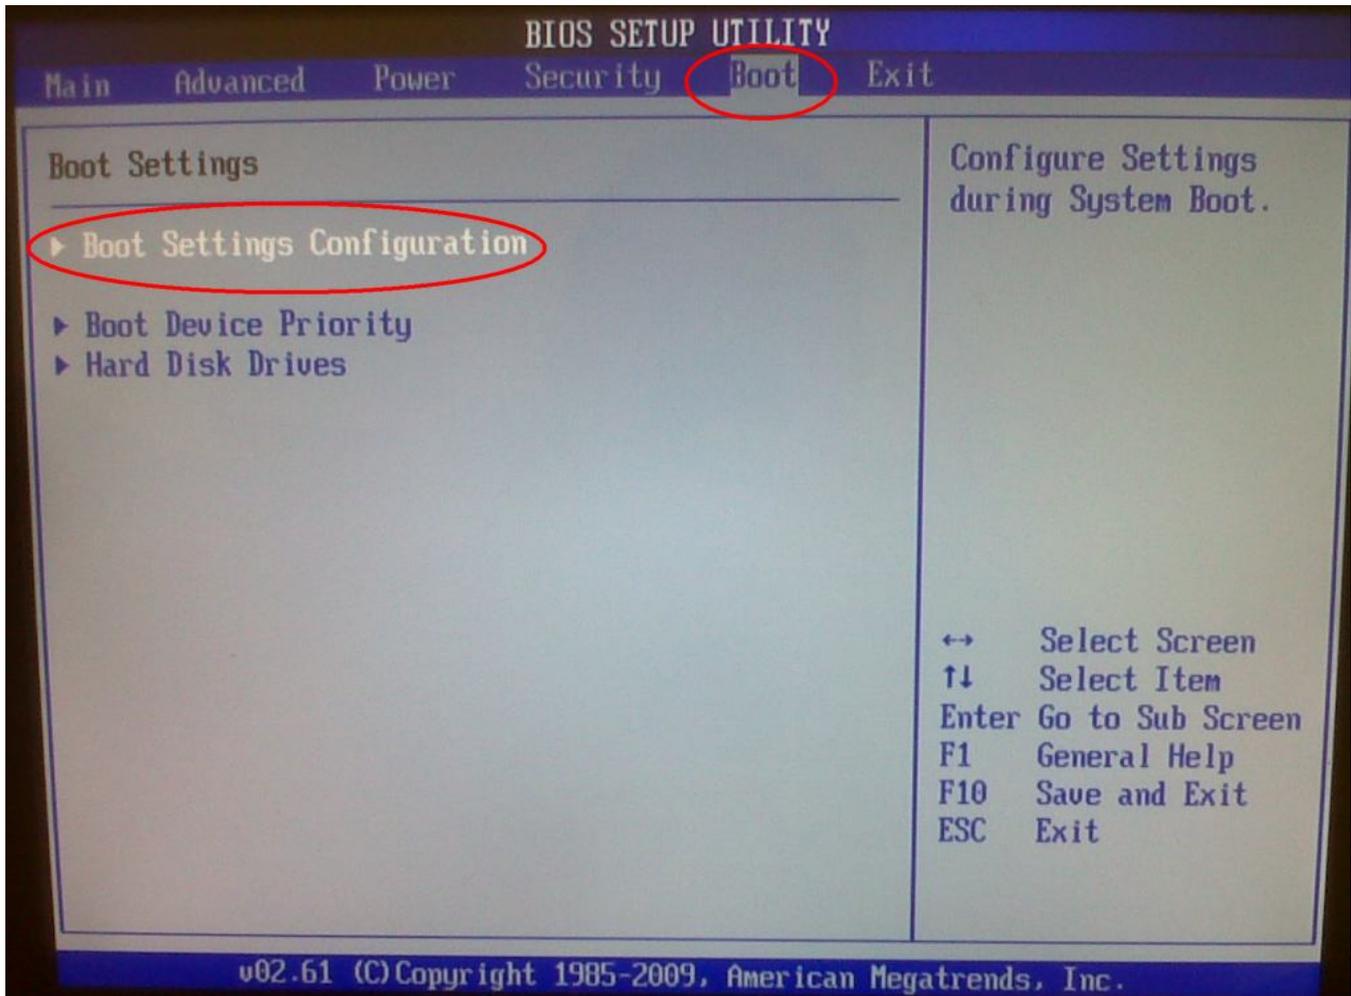


BIOS settings B,C,D,R touchcomputers

- 1.4 Set "Quick Boot" to disabled and set "Quiet Boot" to disabled and then press "Esc" on the keyboard to return to the "Boot Settings" screen.

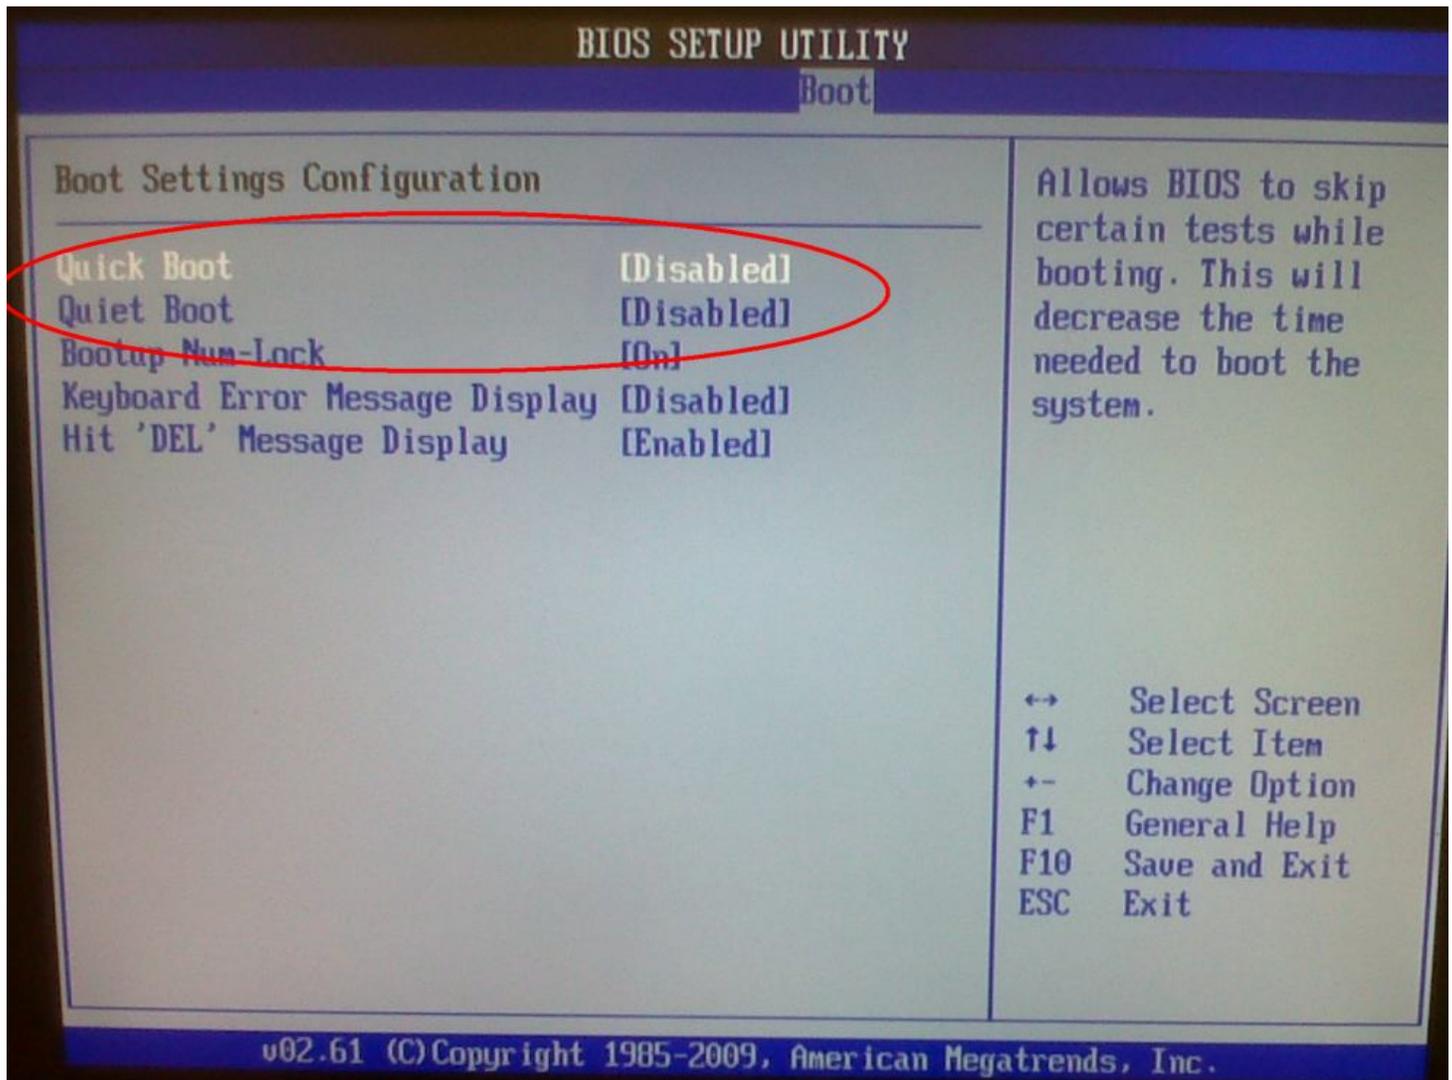

BIOS settings B,C,D,R touchcomputers

- 1.5 Using the arrow keys, navigate down to the “Boot Device Priority” and press enter on the keyboard.
- 1.6 Navigate to the 1st Boot Device and press enter. Choose the bootable USB device as your first boot device by highlighting it and pressing enter.

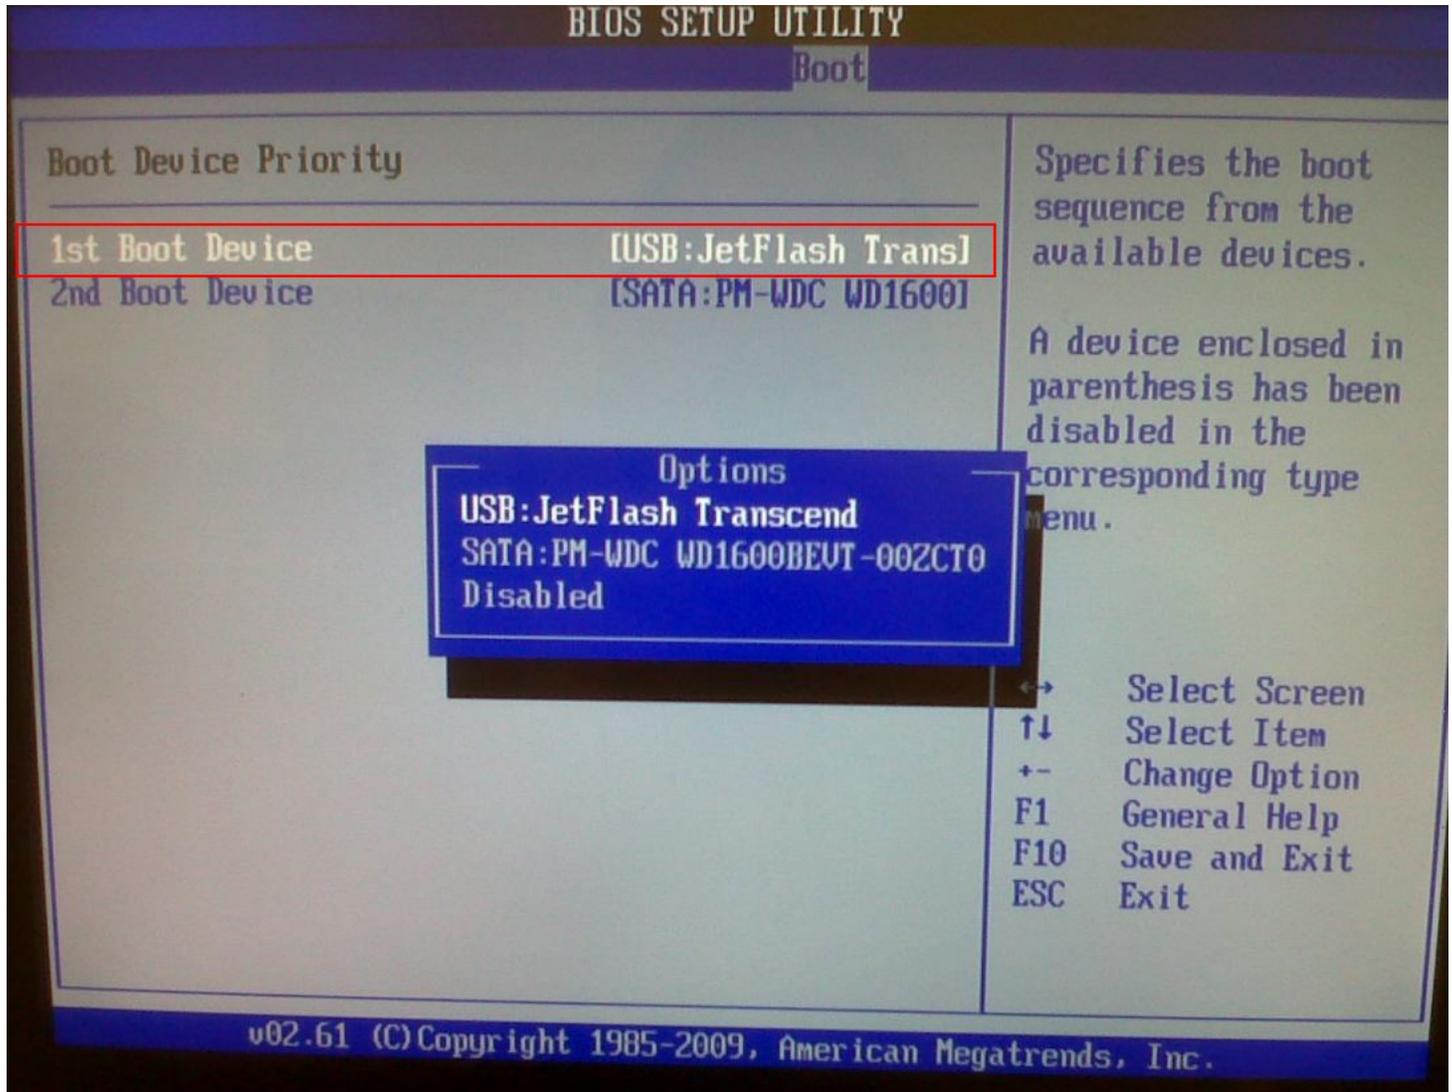

- 1.7 Press F10 on the keyboard to save all changes and exit.
- 1.8 The touchcomputer should now boot from the bootable USB device.