

Biometric Fingerprint Reader (FPR) driver installation B/C series AIO touchcomputers

By Byron Chesney
Solutions Architect

Elo Touch Solutions

September 19, 2012




This procedure explains how to install the driver for the Biometric Finger Print Reader (FPR) on Elo B/C-Series AIO touchcomputers.

In this example we used an ESY22C2 touchcomputer with Windows 7 and the Digital Persona U.are.U FPR sold by Elo, part number: E375206 (part number current as of this writing).


Fingerprint reader installation B/C series AIO touchcomputers

Procedure

1. Attach the FPR to the B/C series AIO touchcomputer as shown in the Quick Start Guide at the following url:
http://media.elotouch.com/pdfs/manuals/B-Series_QIG_FPR.pdf (url valid at the time of this writing)
2. Turn the Elo AIO touchcomputer on and navigate to the following folder: C:Elo TouchSystems/Peripherals/Fingerprint Reader/Drivers/Gold Fingerprint Recognition SW 3.2.0/Fingerprint Recognition SW/Setup → double click the setup file.

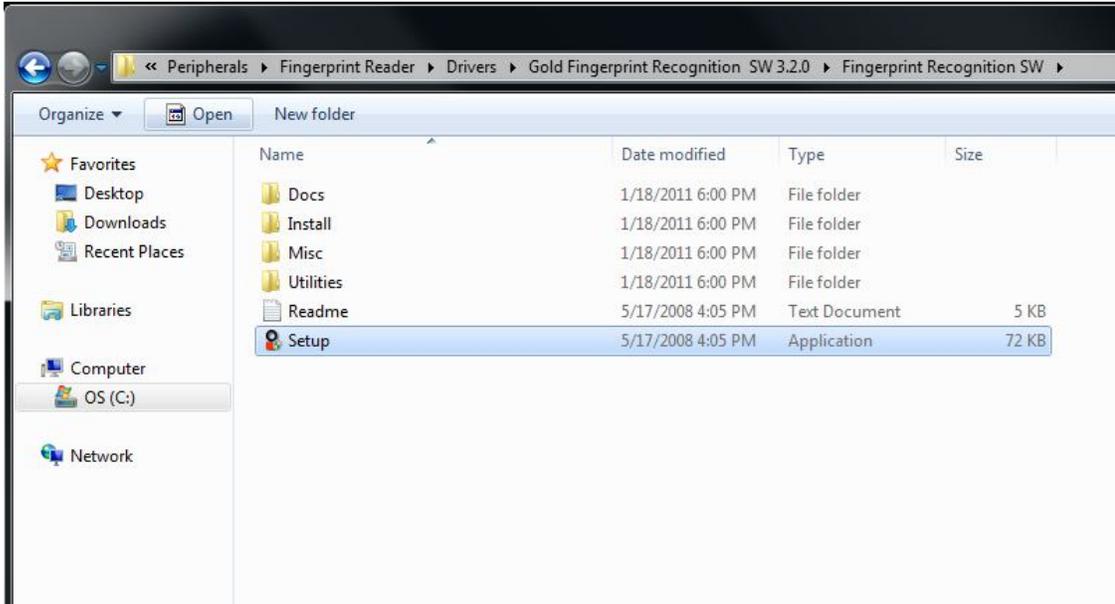


3. Choose "Next".

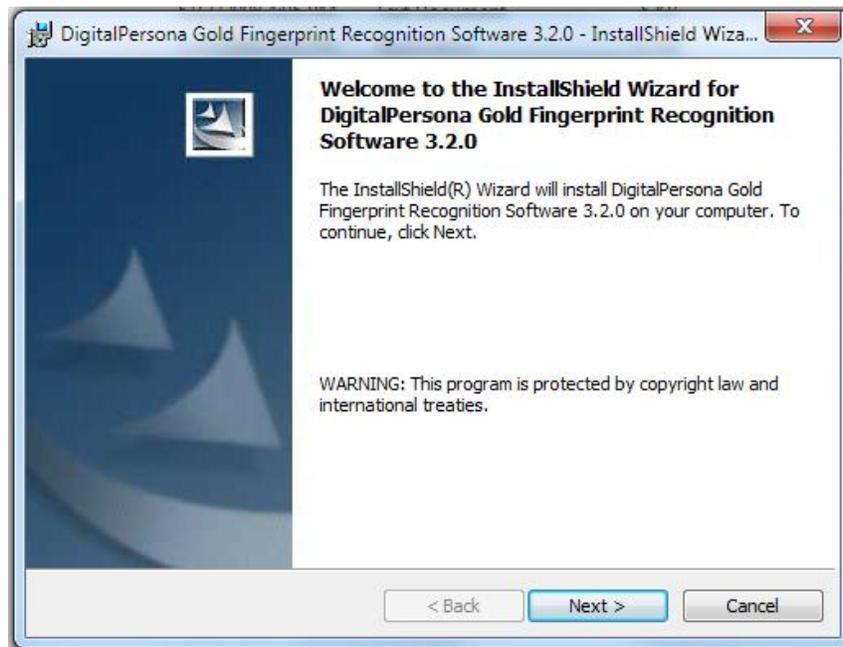


Fingerprint reader installation B/C series AIO touchcomputers

4. Accept the terms in the license agreement then choose "Next".

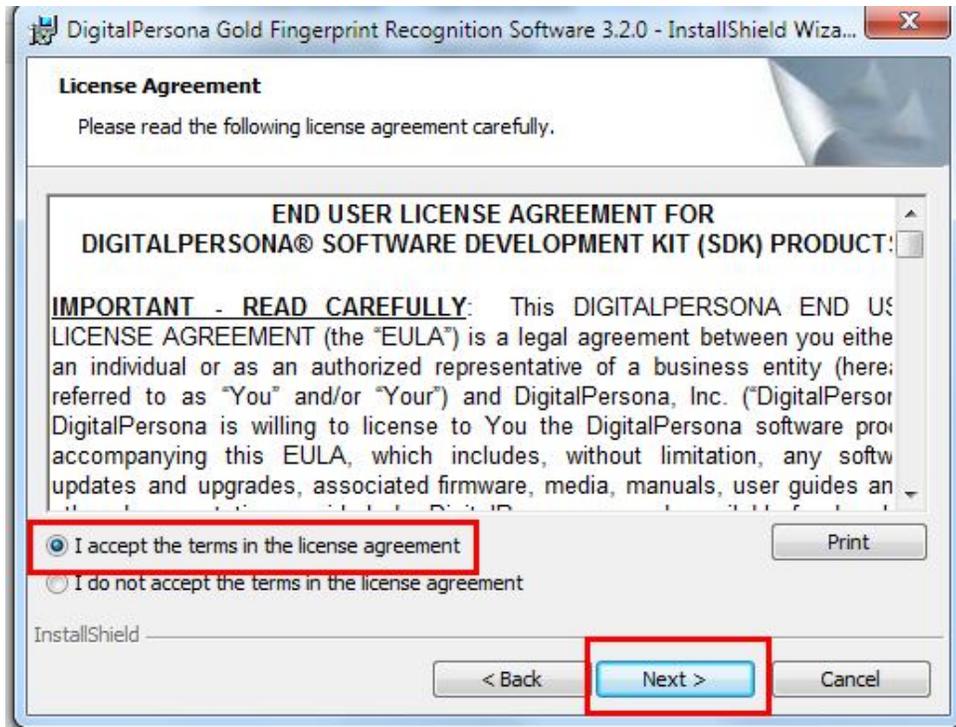


5. The following screen will appear, then choose "Next".

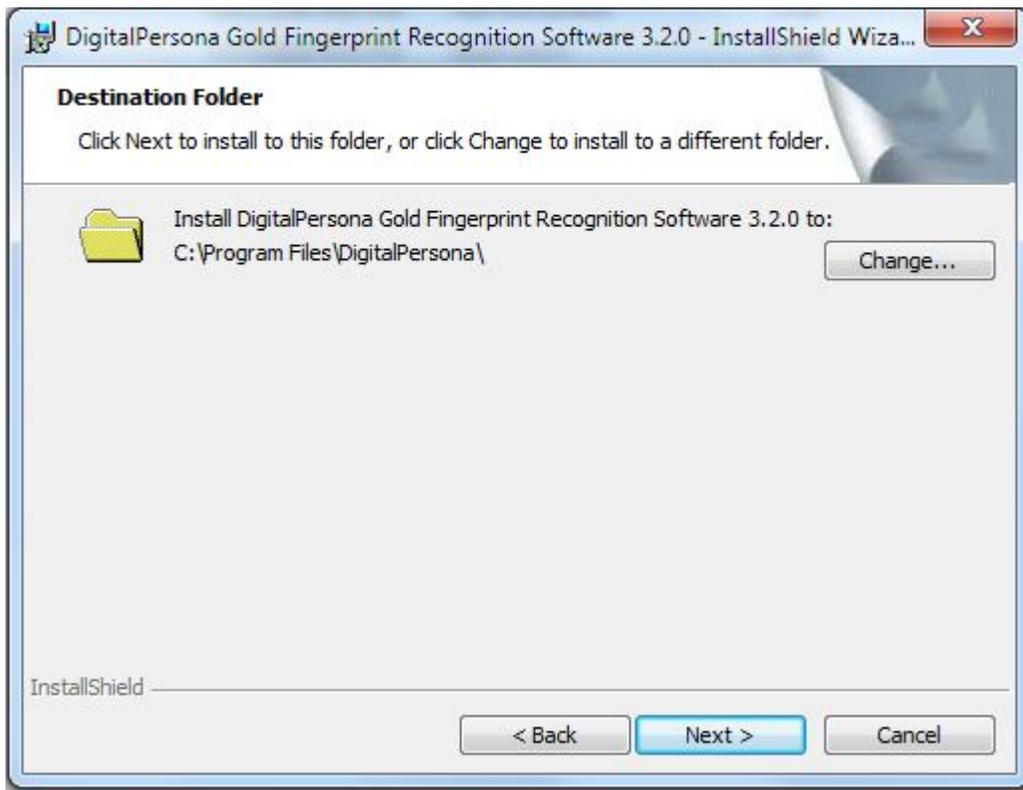


Fingerprint reader installation B/C series AIO touchcomputers

6. You will then be presented with the following screen, choose "Next".

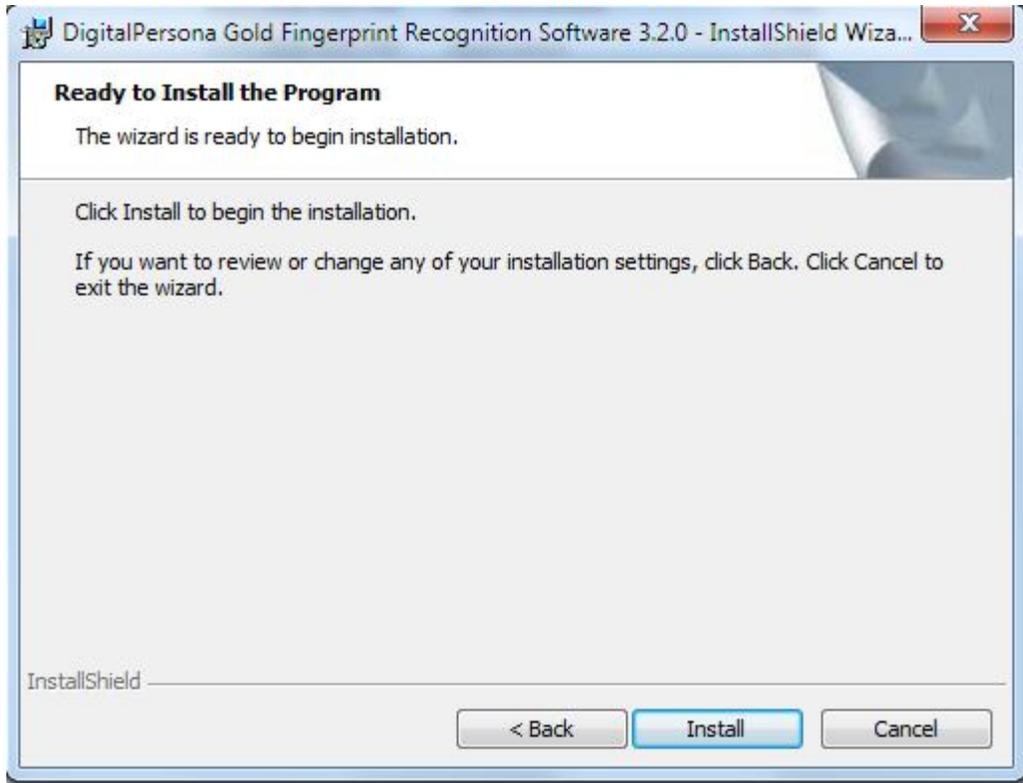


7. The installation will begin, please be patient this may take several minutes.

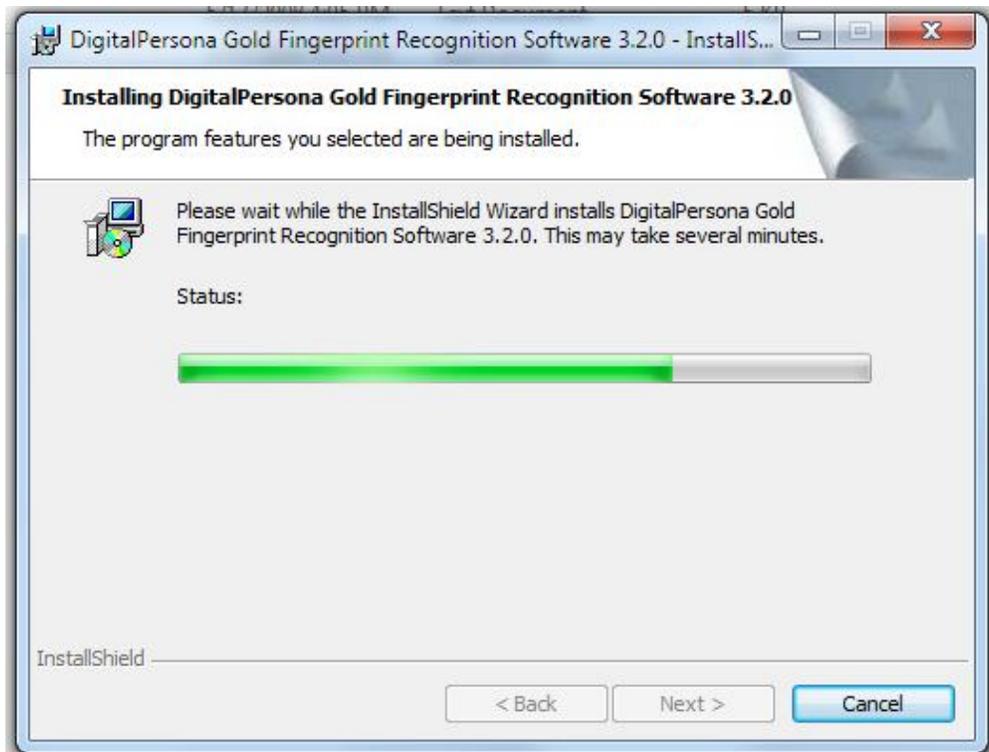


Fingerprint reader installation B/C series AIO touchcomputers

8. During the install you will be presented with the following dialog box, you can choose “Default Key” (recommended) or enter your own 16-character key.

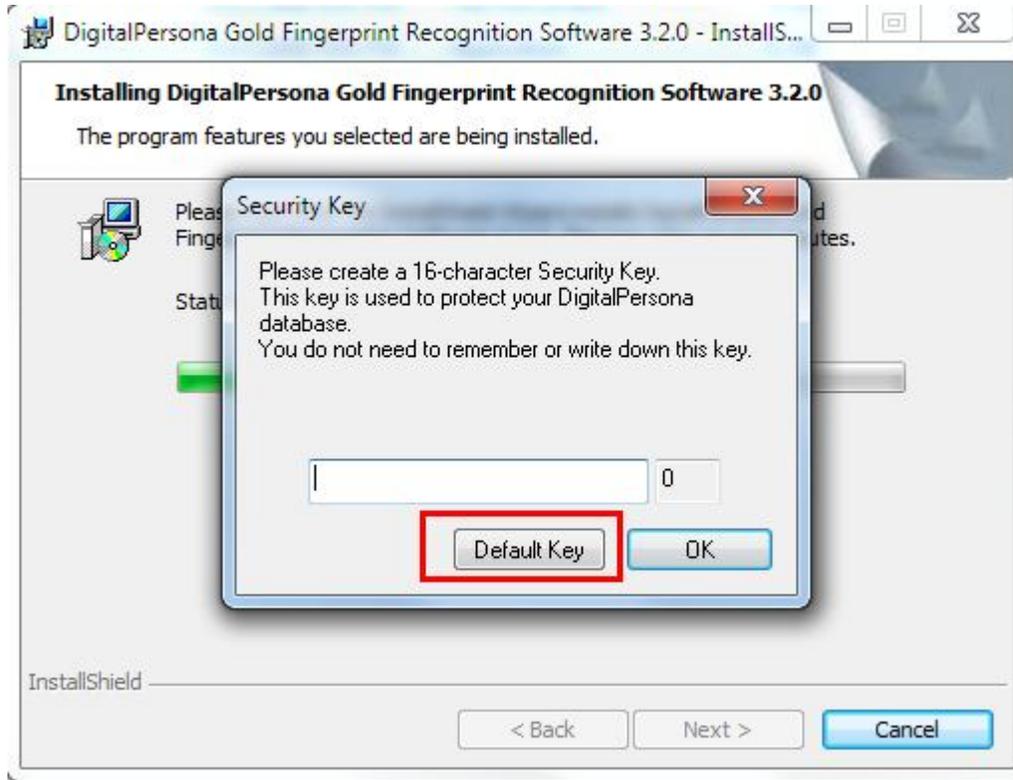

9. The installation will then finish and you will see the following screen, choose “Finish”:

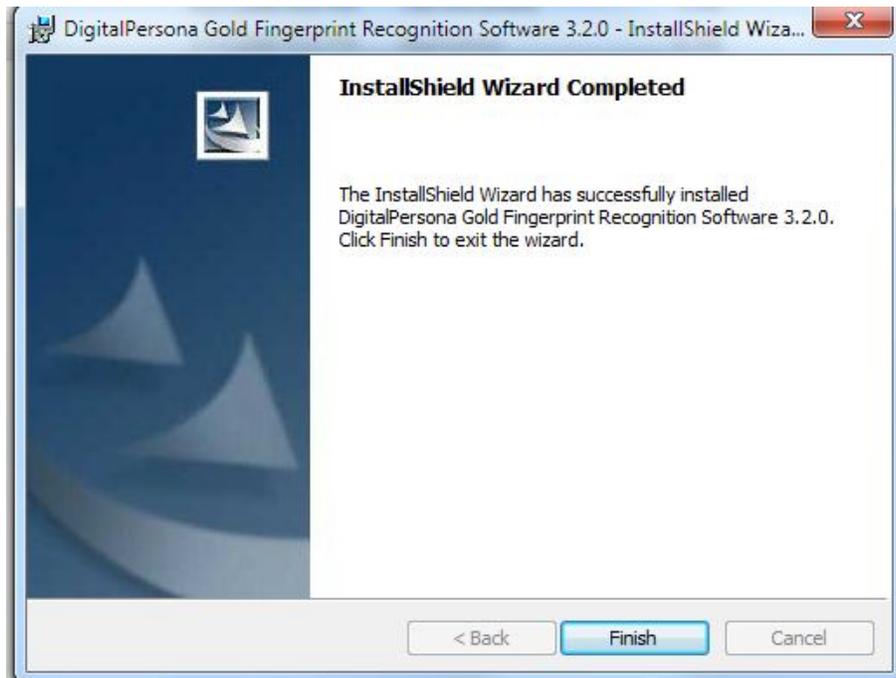


Fingerprint reader installation B/C series AIO touchcomputers


10. Choose "Yes" to restart the computer.



11. After the computer restarts navigate to the following C:\Elo TouchSystems\Peripherals\Fingerprint Reader\Test Applications.

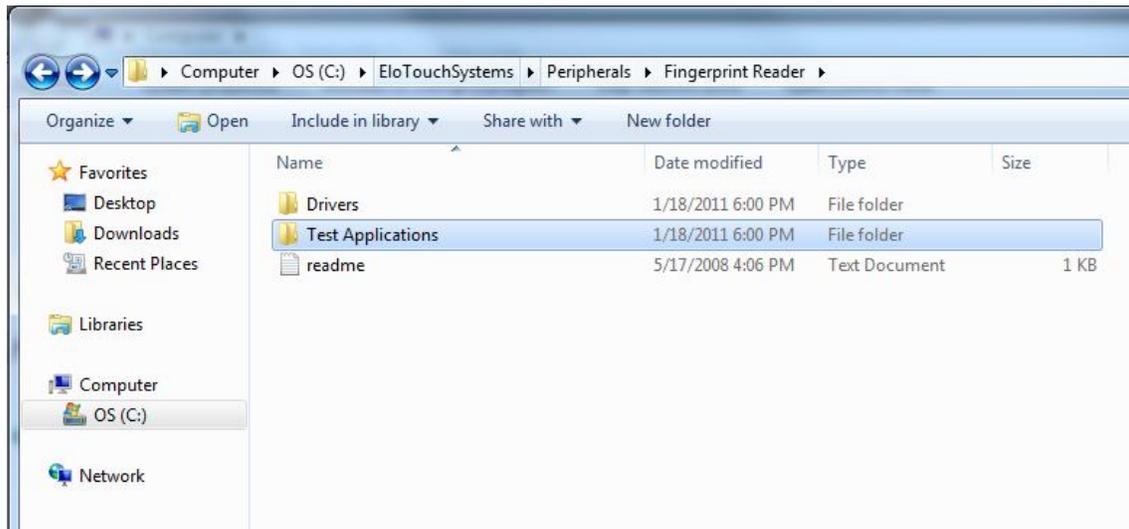


12. Double click the dpFTConnect to open the FPR test application.

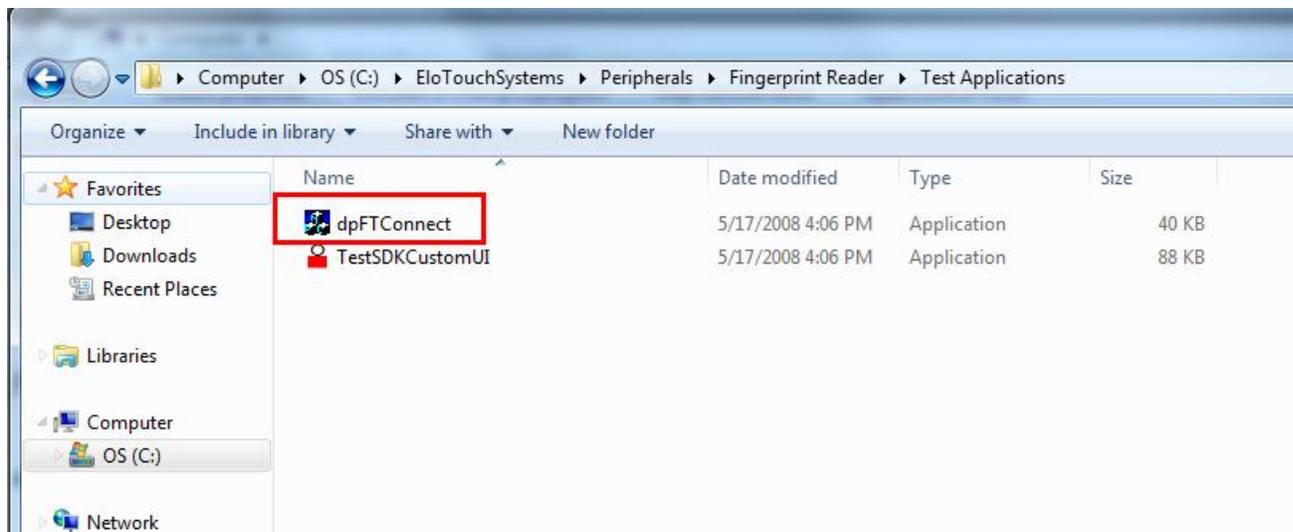

Fingerprint reader installation B/C series AIO touchcomputers

13. You will see the below screen (the Device Status field should indicate “Connected”)

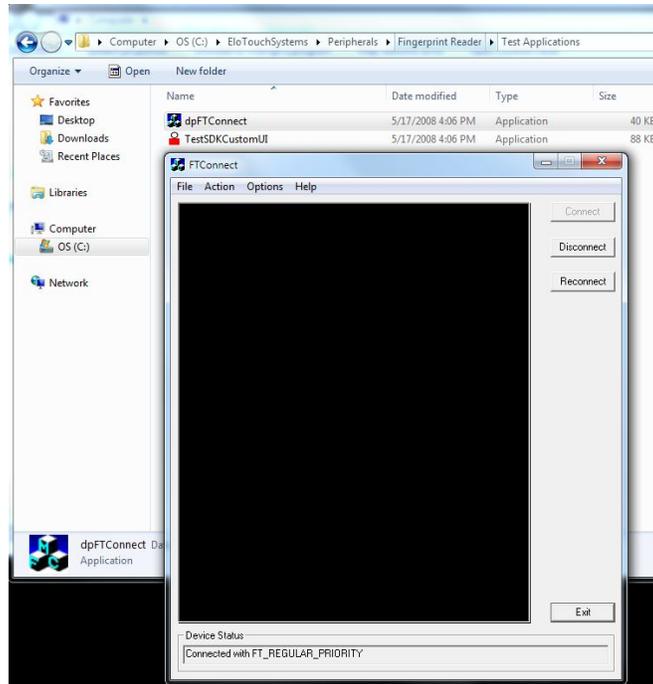

14. You can now test by placing your thumb over the FPR, a scan of your thumbprint should then appear in the FTConnect window.



For additional help with the Digital Persona FPR, please visit their website here:
<http://www.digitalpersona.com/support/faqs/uareureaders/> (url valid at the time of this writing).