


How to remove hard disk drive (HDD) from C-Series AIO

By Byron Chesney
Solutions Architect

Elo Touch Solutions

September 18, 2012

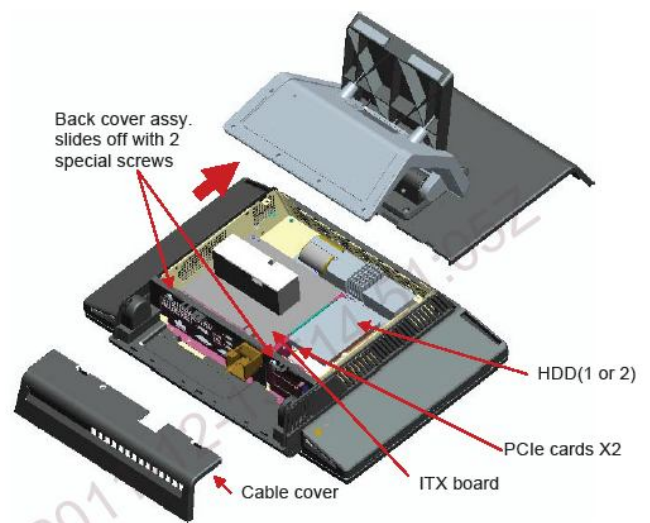


This procedure explains how to get to and remove the hard disk drive (HDD) on an Elo C-Series AIO touchcomputer.

In this example we used an ESY22C2 touchcomputer with Windows 7.

How to remove hard disk drive (HDD) from C-Series AIO

Procedure

1. Shutdown the C-Series AIO. If the cable cover is attached, remove the cable cover and then remove the power cord and any peripheral devices that may be attached ie: mouse, keyboard, etc...

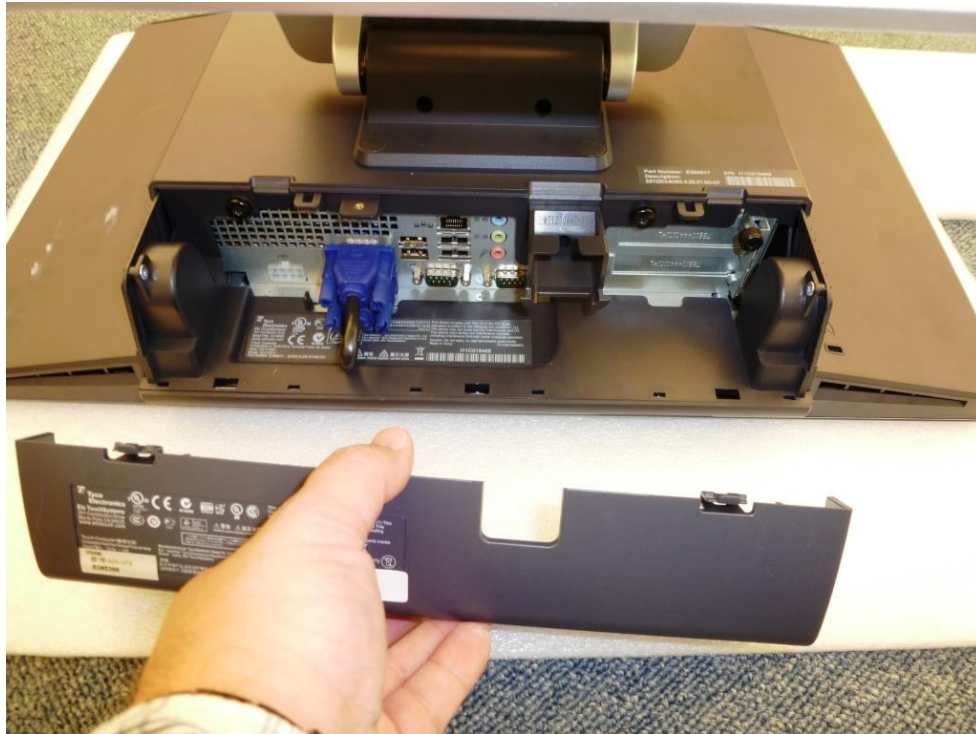


2. Make certain the C-Series AIO is lying face down on a protective surface.




How to remove hard disk drive (HDD) from C-Series AIO

- Using a Phillips head screwdriver, remove the two (2) large custom screws on the bottom of the unit.

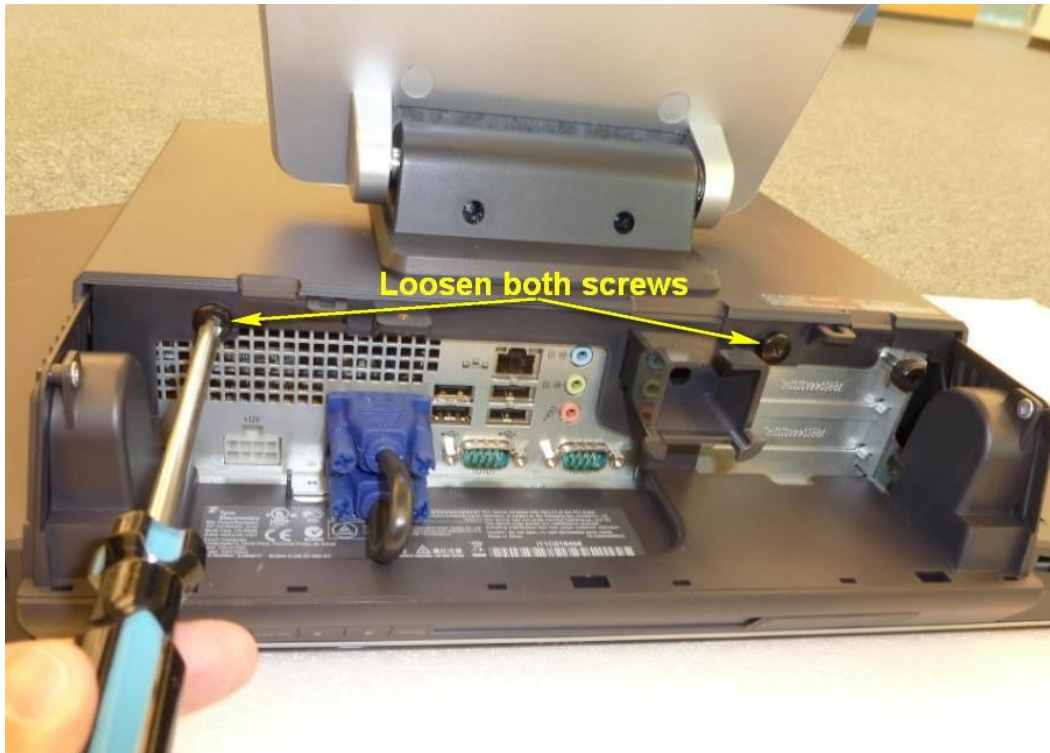


- Using your hands, push the back case forward to release it from the unit.

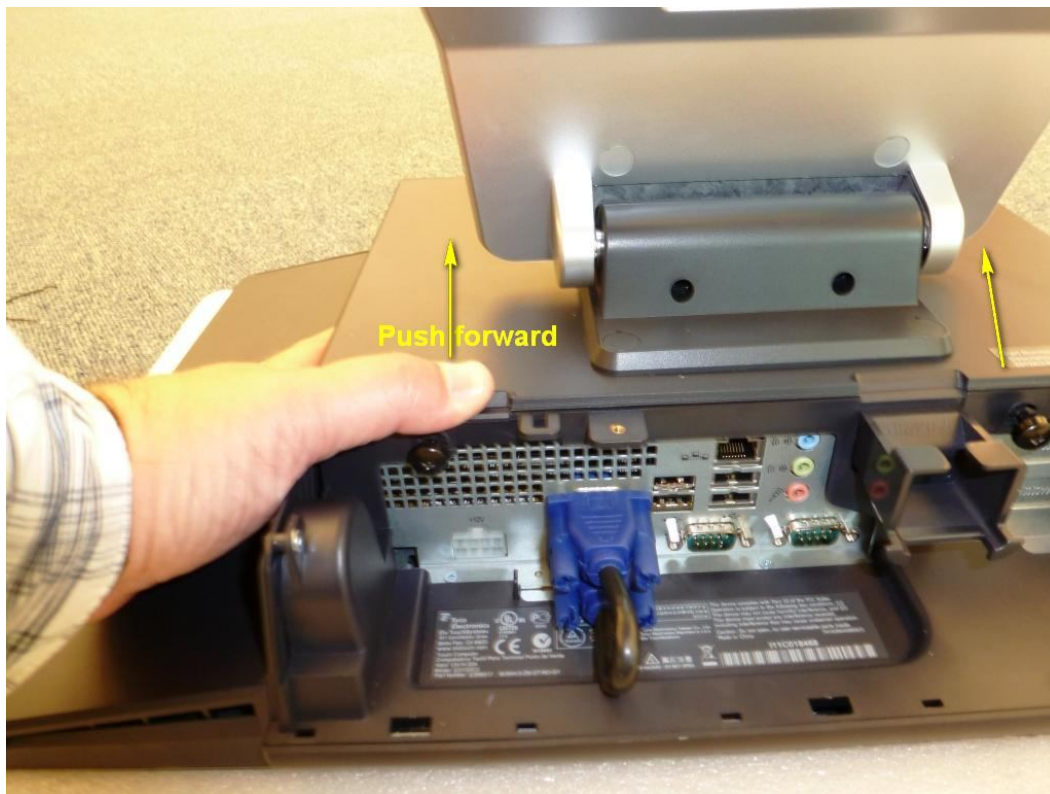

How to remove hard disk drive (HDD) from C-Series AIO

5. Lift the back cover with stand up and off of the unit.

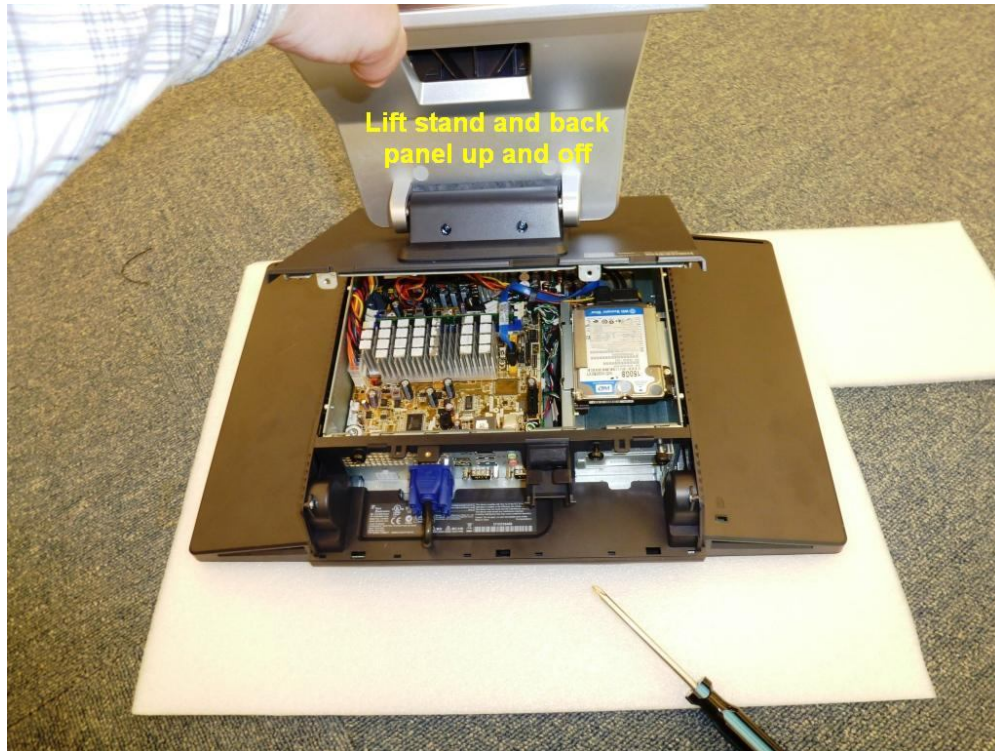

6. Pull up on the black plastic retaining tab on the bottom right corner of the HDD and push forward to release.



How to remove hard disk drive (HDD) from C-Series AIO

7. Disconnect the SATA and power connectors from the HDD, it can now be removed.



8. Reassembly is the reverse of this procedure.

For help with installing a 2nd HDD, go to the following url: http://media.elotouch.com/pdfs/manuals/C-Series_QIG_HDD.pdf (this url is valid at the time of this writing).