Author: Erik Mathues
Date: lan 28, 2020

Date :Jan 28, 2020 Page | 1

START

1/ before the upgrade to 4.44.82+a make sure the i-series already has 3.46.50 if it hasn't first upgrade to 3.46.50

2/ use micro SD card, I used 32GB MicroSDHC



3/ format if needed with FAT32

4/ below the URL for images 3.46.50 and 4.44.872+a

3.46.50

https://elotouch.sharepoint.com/:u:/s/EMEAFAE/Eb34fGW1785CkKeQte8dXqlBOfWqL9eQmbxZA69stu2yvg?e=xXkZMo&download=1

4.44.82+a

 $\frac{https://elotouch.sharepoint.com/:u:/s/EMEAFAE/Ec9n7Gnr3MZLmsKfZXxy7GsBJN2OYM1f1-zcVhpSn YZQw?e=ugEcGH&download=1$

5/ upgrading from 3.xx to 3.46.50

- remove power from i-series
- copy 3-46-50.zip to SDCARD
- insert SDCARD into i-series SDCARD slot
- press and hold down the home button and while keeping it pressed power the i-series.

The power LED will start blinking, keep the home button pressed until it stops blinking and below screen will appear



- select 'Apply update from SD card' with the i-series home button and confirm the selection with the power button.

Author: Erik Mathues Date: Jan 28, 2020


Page | 2

Below screen will appear.

```
Android/msm8953_64/msm8953_07
7.1.2/N2G47H/3.26.54
user/test-keys
Home button cycles highlight.
Power button activates.
Choose a package to install:
//sdcard

../
3-46-50.zip
LOST.DIR/
System Volume Information/
```


- select the 3.46.50.zip with the home button and confirm with the power button You will see below and let it run.

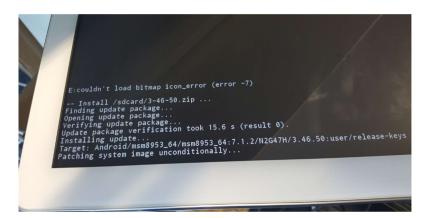

Author: Erik Mathues
Date: Jan 28, 2020

Date :Jan 28, 2020 P a g e | 3

The unit will reboot, press settings in the menu bar and you will see below version

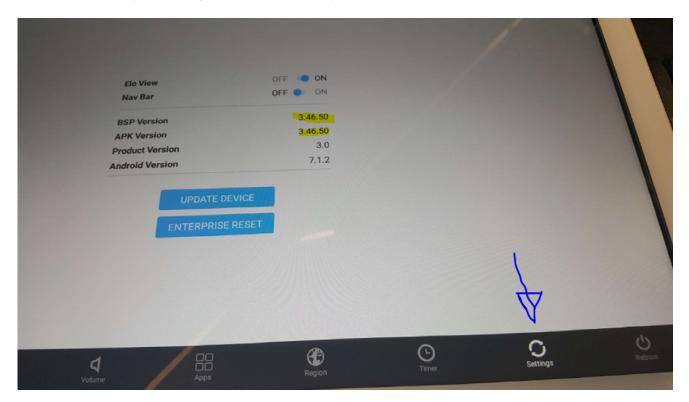

6/ upgrade to 4.44.82+a

- remove power from i-series
- format SDCARD with FAT32
- copy 4.4.82+a.zip to SDCARD
- rename it to update.zip
- insert SDCARD into i-series
- Hold home key and power on the device to start Auto-update using recovery mode., Release home key once OTA installation gets started by Recovery and progress gets visible on the screen, see below screen (might be that it disappears and re-appears) and let it run




Author: Erik Mathues
Date: Jan 28, 2020

Date :Jan 28, 2020 P a g e | 4

- The unit will reboot

Press home, keep it pressed and then power button

- control panel will appear, password is 1elo
- check in settings the version

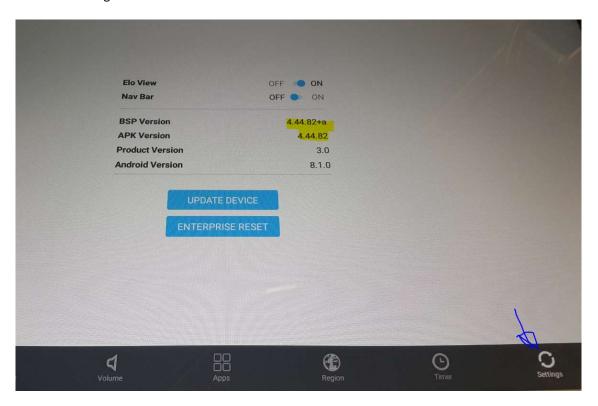

END