

Executive Summary

This Technical Bulletin describes how to access and remove/replace the SSD in the Elo Windows I-Series 2.0 devices.

Steps

1. Place the Elo Windows I-Series 2.0 device face down on a protective surface and disconnect the power.
 - a. Using a #2 Philipps screwdriver, remove the screw that holds the small plastic cover on the bottom of the unit.



- b. Pull up on the plastic cover and remove.



- c. Using the #2 Philipps screwdriver, remove the screw that holds the SSD.



- d. Remove SSD from slot and replace with compatible drive.



- e. Replace screws and back cover.