


## EloView - How to Remotely Reboot A Device

How do I remotely reboot my device from EloView Portal?

Devices can be remotely updated from the device's menu.

- Select the settings tab.
- From the setting tab, a device can be rebooted, reset, and deleted. For the purposes of rebooting select '**Reboot Device**'.
- You will then be asked to confirm the reboot. Select '**Yes**'. Your device will reboot.

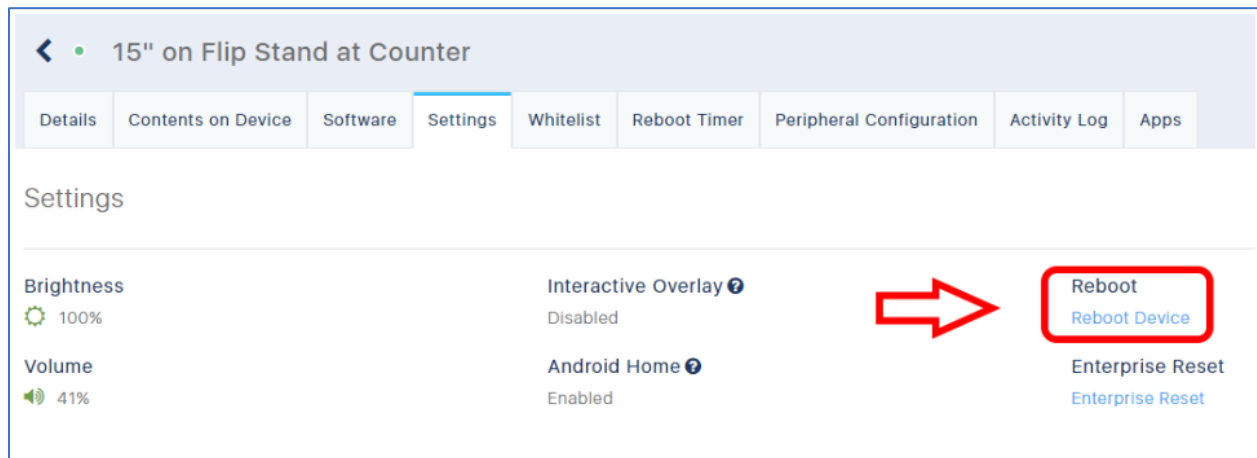

#eloview #reboot #restart