

Overview

This procedure describes how to enter the factory OSD menu and disable the Elo Splash screen on the Elo 1502L touch monitor.

Hardware/Software Needed


- Elo 1502L touch monitor connected to a computer.

Steps

1. *Connect* the **1502L touch monitor** to a computer video source.
2. *Press* the **Power button** and *confirm display operation*.
3. *Press* the **Power button** again to *turn off* the **display**.
4. While *holding* the **Select button**, *press* the **Power button** to *turn on* the **unit**. This will allow for access to the Factory menu.
5. *Press* the **Menu button**.



- a. The letter **F** should appear in the upper left corner of the OSD menu. If it doesn't, *turn off* the **display** and *repeat* **step 4**.

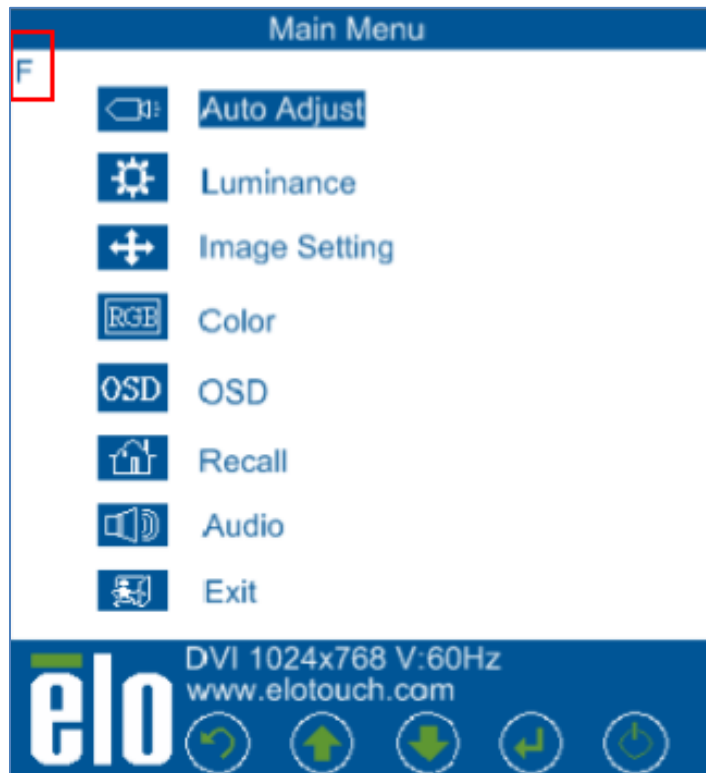

6. *Scroll through* the **OSD menu** using the **L** or **R** (left or right arrow) **buttons** to *highlight* the **F** and *press* **Select**. The **Factory display/menu** will appear on the screen.
7. *Scroll through* the selections using the **L** or **R button** to *highlight* **ELO LOGO**.

8. Use the L or R button to *change* the setting to **Off**. *Press Select*.
 - a. Be careful not to disturb any other options.



9. Use the L or R button to *scroll through* the options and *highlight Exit* and *press Select*.
10. Cycle **power** by *removing the monitor's power cable* for 30-seconds then *reconnect cable*.
 - a. Verify that the **Elo logo** does not appear during the **power on sequence**.