

Contents:

- TH10 Trigger Handle
- 18W AC-DC Adapter
- US/EU/UK/CN Adapter Plugs



Quick Installation Guide

Elo M50 Trigger Handle (TH10)

Revision A
P/N E523028

Elo Technical Support

Online self-help: www.elotouch.com/support

America

800-ELO-TOUCH
Tel +1 408 597 8000
elosales.na@elotouch.com

Europe (EMEA)

Tel +32 (0)16 70 45 00
emea.sales@elotouch.com

Asia Pacific

Tel +86 (21) 3329 1385
www.elotouch.com.cn

The information in this document is subject to change without notice. Elo Touch Solutions, Inc. and its Affiliates (collectively "Elo") makes no representations or warranties with respect to the contents herein, and specifically disclaims any implied warranties of merchantability or fitness for a particular purpose. Elo reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of Elo to notify any person of such revisions or changes.

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, including, but not limited to, electronic, magnetic, optical, chemical, manual, or otherwise without prior written permission of Elo Touch Solutions, Inc.

Elo and the Elo logo are either trademarks or registered trademarks of Elo Touch Solutions, Inc..





- ① USB-C for Power/Charging
- ② Thumb Screw
- ③ Hand Strap Tie Point



- ④ USB-C for Connecting to M50
- ⑤ Trigger Button


Trigger Handle Installation

1. Connect to the M50

- Hold the trigger handle horizontally (as shown below), lay the M50 flat on the trigger handle.



- Insert the M50 horizontally into the male USB-C on the trigger handle.

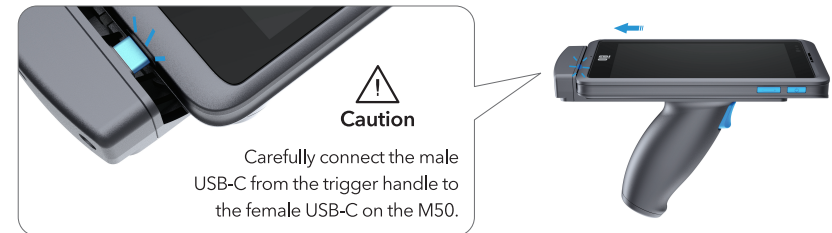

2. Fix the trigger handle to the M50

- Flip the device over and tighten the two thumb screws.

