



Download AP Installation

1) Double-click on **68MDLX2L.exe** to begin the installation.


2) Click **Next** button.

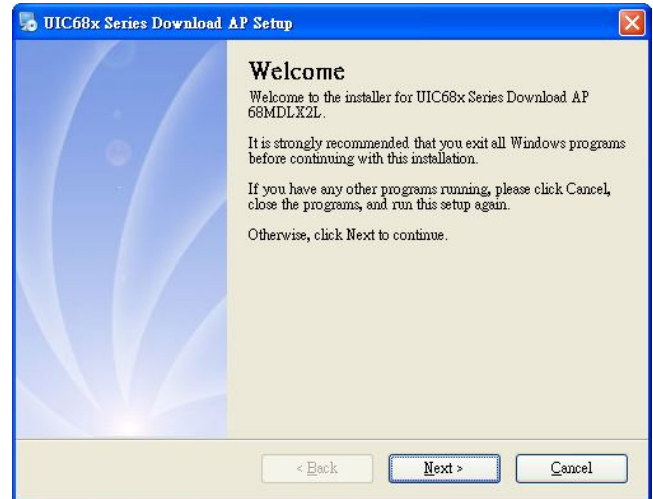

3) Enter your user information and click **Next** to continue.

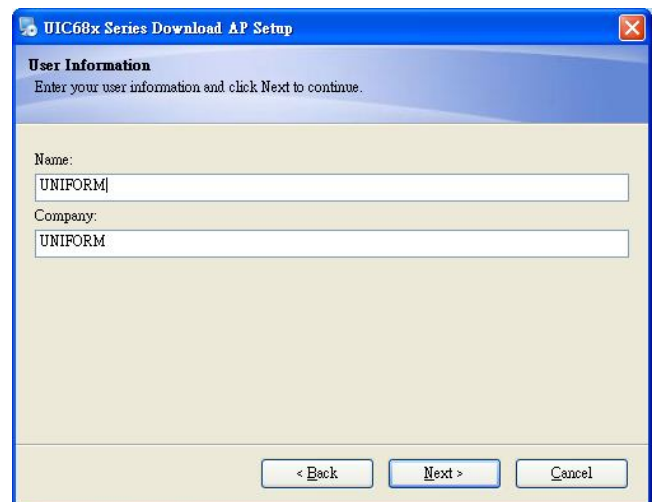


4) Windows will install the program at “C:\Program Files\UIC68x Series Download AP” folder.(You may change the program directory that you want to install)
Click **Next** to continue.

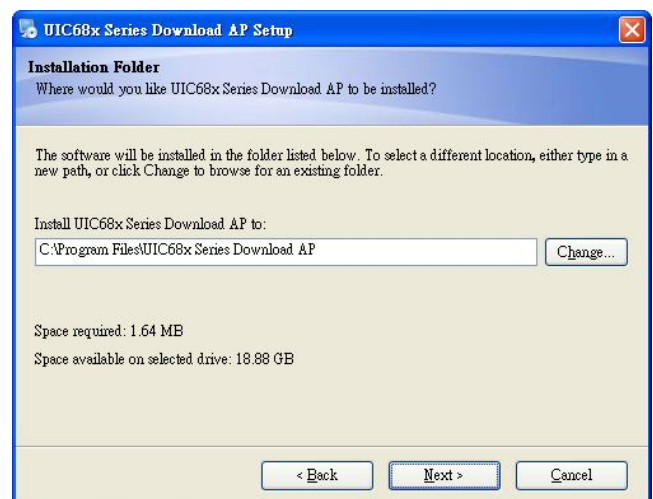


UIC680 Download AP User Guide


Click **Next** to continue.

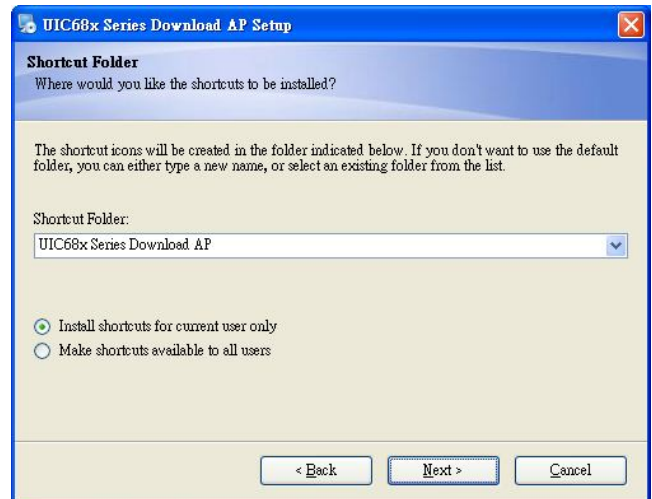

Click **Next** to continue.

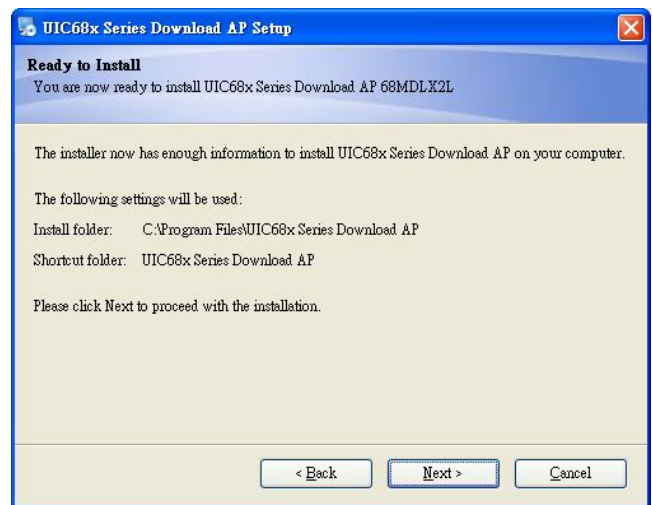


5) Click on **Finish** to end the installation of this Download AP.

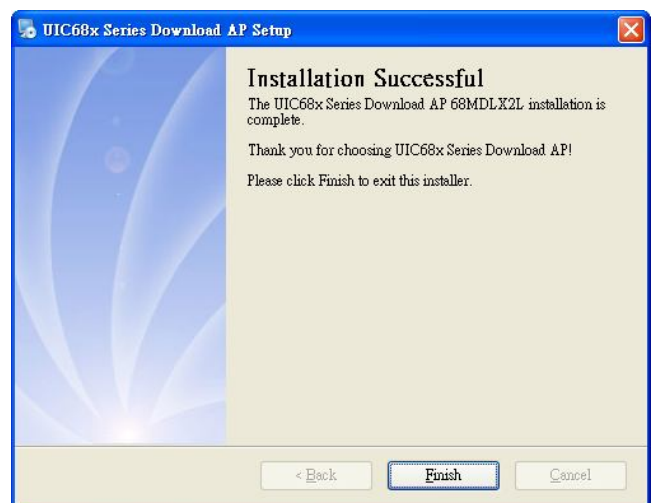

Update Firmware

Step 1. Select Communication Interface ‘USB HID Keyboard’.


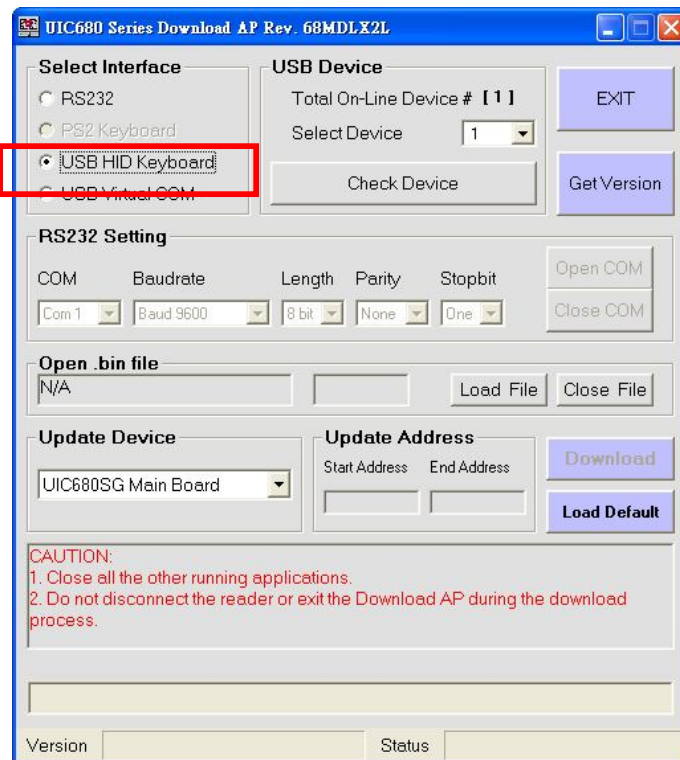


Step 2. Select “UIC680SG_MAD Main Board”




UIC680 Download AP User Guide

Step 3. Load the firmware file “68TP961P_b07_T.bin”, then the filename/checksum appears.

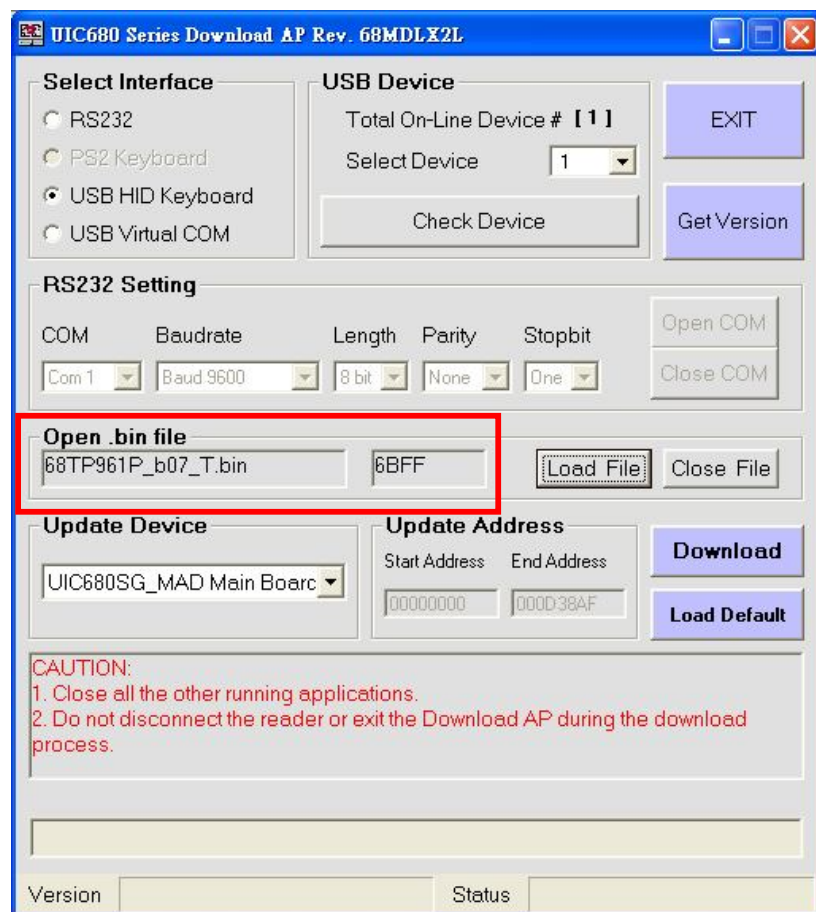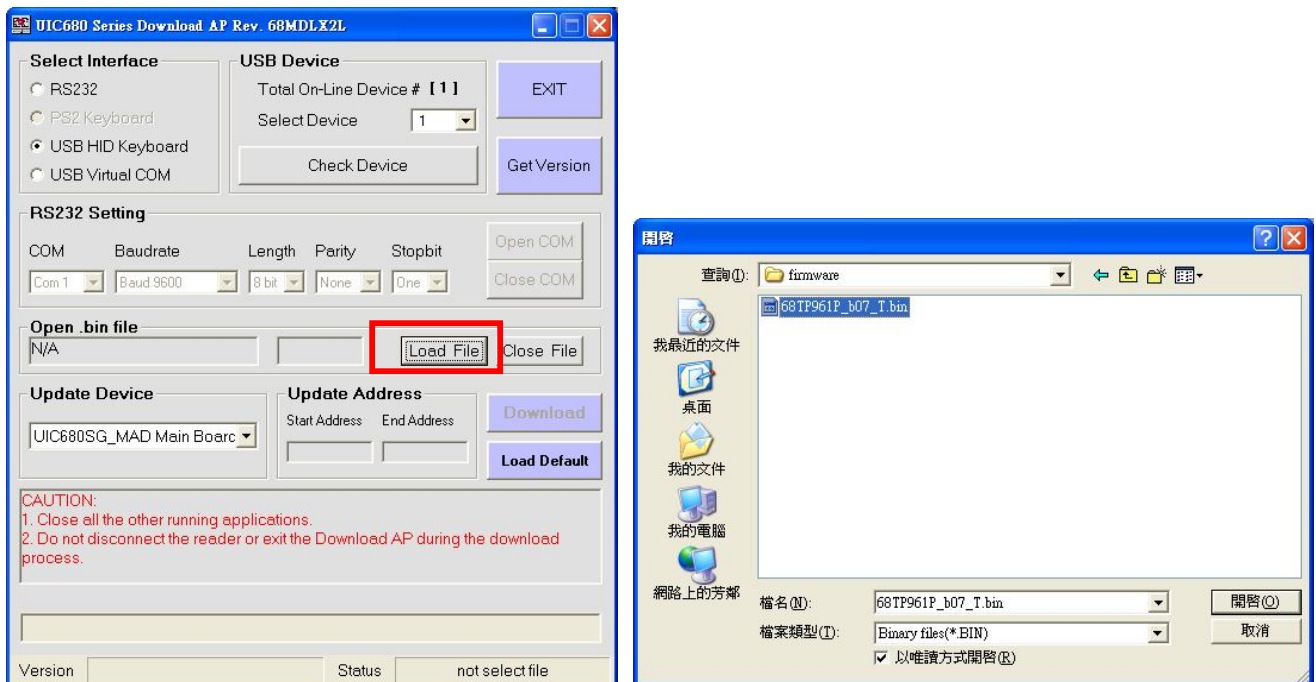


UIC680 Download AP User Guide

Step 4. Click 'Download' button to start download process.

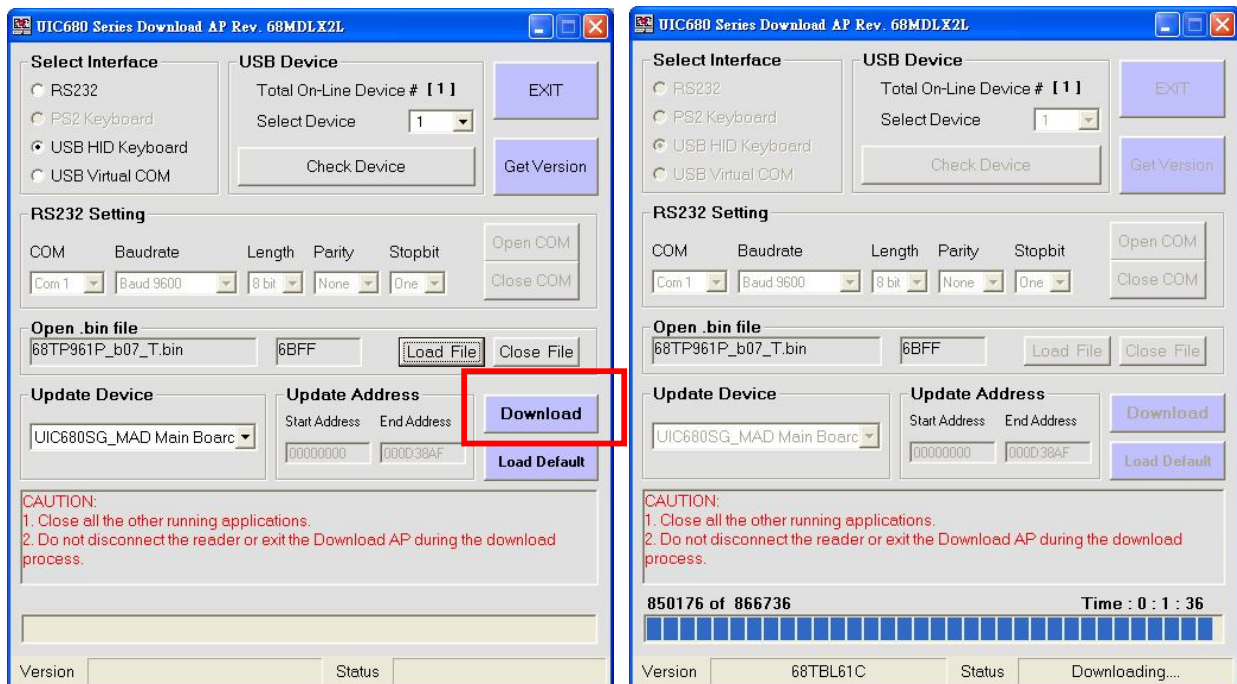

Step 5. Make sure the "Download complete" message and click 'Load Default' button.

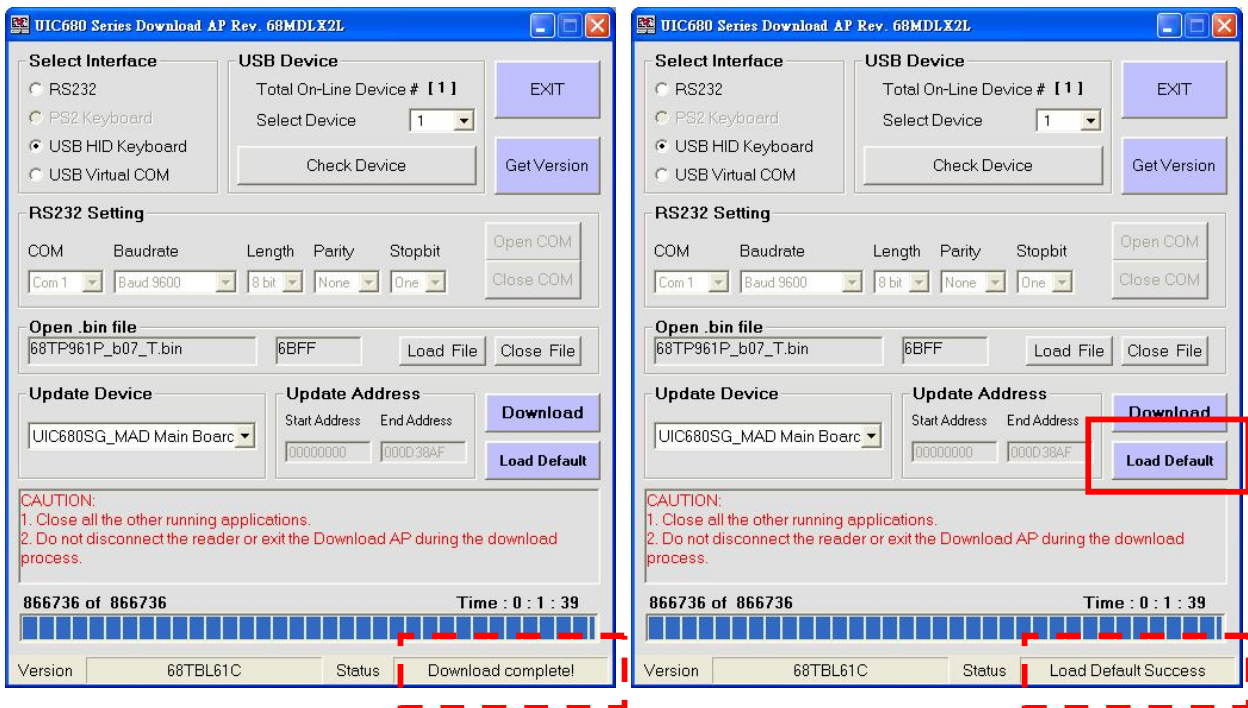

Step 6. And then connect the next unit to program (repeat step4 & step5), or click 'EXIT' button.